



AMETHYST

USER GUIDE

V.3.8





Your AMETHYST: Serial Number:

Product ID:

CONTENT

1 EQUIPMENT 7

- 1.1 IMPORTANT SAFETY INSTRUCTIONS 8
- 1.2 WHAT'S IN THE BOX 9
- 1.2 SPÉCIFICATIONS 10

2 PRESENTATION 13

- 2.1 FRONT PANEL CONTROLS 14
- 2.2 FRONT PANEL DISPLAY 15
- 2.3 REAR PANEL 16
- 2.4 REMOTE CONTROL 17
- 2.5 3D MEASUREMENT MICROPHONE 18

3 INSTALLATION 19

- 3.1 CONNECTING A SOURCE 20
- 3.2 CONNECTING A TURNTABLE 21
- 3.3 CONNECTING SPEAKERS 22
- 3.4 CONNECTING THE MICROPHONE 23

4 FIRST STEPS 25

- 4.1 POWERING ON THE AMETHYST 26
- 4.2 BASIC OPERATIONS 27
- 4.3 NAVIGATING THE MENUS 28
- 4.4 USING THE REMOTE CONTROL 29

5 NETWORK SETUP 31

- 5.1 OVERVIEW 32
- 5.2 USING THE AMETHYST AS A WIFI ACCESS POINT 32
- 5.3 USING THE AMETHYST AS A DHCP CLIENT 34
- 5.4 REMOTE ACCESS TO THE GRAPHICAL USER INTERFACE (GUI) 35
- 5.5 CONNECTION TO AN EXISTING WIFI NETWORK 38

6 NETWORK STREAMING 41

- 6.1 THE UPNP PROTOCOL 42
- 6.2 UPNP NETWORK ARCHITECTURE 42
- 6.3 LIST OF RECOMMENDED UPNP SOFTWARES 44

7 ADVANCED PREAMPLIFIER SETUP 55

- 7.1 OVERVIEW 56
- 7.2 SETTING UP THE AUDIO CLOCK 58
- 7.3 SOURCES CONFIGURATION 59
- 7.4 PRESETS MANAGEMENT 61
- 7.5 POWER-ON DEFAULT SETTINGS 62
- 7.6 USB BACKUP/RESTORE 63
- 7.6 CHANNELS SETTINGS 64

8 BASIC OPTIMIZER SETUP 69

- 8.1 OVERVIEW 71
- 8.2 PRESETS SELECTION & OUTPUT CONNECTIONS 72
- 8.3 MICROPHONE SETUP 74
- 8.4 CALIBRATION LEVEL ADJUSTMENT 76
- 8.5 CROSSOVER CALIBRATION 77
- 8.6 SPEAKER CALIBRATION 81
- 8.7 AUTOMATIC PRESETS 84

9 ADVANCED OPTIMIZER SETUP 87

- 9.1 TRINNOV CERTIFIED INSTALLERS 88
- 9.2 ARBORESCENCE OF THE GUI MENU 88
- 9.3 ITERATIVE PROCEDURE 89
- 9.4 OPTIMIZER GRAPHS 91
- 9.5 OPTIMIZER MODES 93
- 9.6 OPTIMIZER SETTINGS 97
- 9.7 TARGET CURVE / LIMITER CURVES 99
- 9.8 ABOUT LATENCY 102

10 MULTIPOINT CALIBRATION 103

- 10.1 PRINCIPLE 104
- 10.2 MEASUREMENT POSITIONS 104
- 10.3 MULTIPOINT ENGINE 105

11 MULTICHANNEL SETUPS 107

- 11.1 SOURCES CONFIGURATION 108
- 11.2 SOURCES ROUTING 109
- 11.3 SPEAKERS CONFIGURATION 111
- 11.4 SPEAKERS ROUTING 112

The Amethyst also includes the best of active acoustic correction in an elegant enclosure.

Based on years of extensive research in the acoustic and signal processing fields, the Optimizer -integrated to the Amethyst- is the only technology of its kind largely adopted both by professional and audio enthusiasts, worldwide.

The Amethyst handles all kind of sources, from the turntable to high-resolution files through the network.



EQUIPMENT

1.1	IMPORTANT SAFETY INSTRUCTIONS	8
1.2	WHAT'S IN THE BOX	9
1.3	SPECIFICATIONS	10

1.1 IMPORTANT SAFETY INSTRUCTIONS

1. Read the following instructions carefully. Save all instructions for future reference.

2. Follow all warning and instructions.
3. TRINNOV Audio expressly forbids unauthorized modification of this equipment.
4. Using the unit in the following locations can result in a malfunction:
 - In direct sunlight
 - Locations of extreme temperature or humidity
 - Excessively dusty or dirty locations
 - Locations of excessive vibration
 - Close to magnetic fields
5. Condensation can form on the inside of the apparatus if it is suddenly moved from a cold environment to a warmer location. Before switching the unit on, it is recommended that the unit be allowed to reach room temperature.
6. Clean only with a dry cloth. Do not use liquid solvent-based cleaners.
7. Do not cover or block ventilation slots or openings. Never push objects of any kind into ventilation slots on the equipment casing.
8. Install in conformance with the manufacturer's instructions.
9. Maximum permissible operating conditions: 0°C to 40°C, 20-65% relative humidity.
10. Protect the power chord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Always replace damaged fuses with the correct rating and type: 3,15 AT.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Do not open the equipment case. There are no user serviceable parts in this equipment. Refer all servicing to qualified service personnel.
14. Please connect the designated AC/AC power supply to an AC outlet of the correct voltage. Do not connect it to an AC outlet of voltage other than that for which your unit is intended.
- 15. TO COMPLETELY DISCONNECT THIS APPARATUS FROM THE AC MAINS, DISCONNECT THE POWER SUPPLY CORD PLUG FROM THE AC RECEPTACLE.**



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

1.2 WHAT'S IN THE BOX



The Trinnov AMETHYST



3D Trinnov Microphone
(Optional)



Power Cable



Remote Control



WiFi Antenna



CR2032 Battery

1.3 SPECIFICATIONS

HIGH PERFORMANCE AUDIO

ADC RESOLUTION / SAMPLING RATE	24 bits/96 kHz
DAC RESOLUTION / SAMPLING RATE	24 bits/192 kHz
A/D SIGNAL-TO-NOISE RATIO	119 dB (A-Weighted)
D/A SIGNAL-TO-NOISE RATIO	118 dB (A-Weighted)
CLOCK / JITTER	Variations under 25ps are recovered, jitter attenuation superior to 50 dB is achieved above 100Hz
POWER SUPPLY	Independant for audio and processing sections
SAFETY COMPONENTS	AntiPop relays on each analog output
DESIGN AND ASSEMBLY	All Audio boards designed and manufactured by Trinnov in France

PROCESSING SECTION

PROCESSOR	Intel Dual-Core 1,8 GHz
DATA WIDTH	64 bits, floating point
RAM	1 Go DDR3
STORAGE	Flash Drive 1 GB
COOLING SYSTEM	Custom heat sinks + additionnal slow fans

CONNECTIVITY

ANALOG INPUTS/OUTPUTS

- 2 single-ended channels inputs via 2 x cinch (47k Ohms)
- 2 single-ended channels line/phono inputs via 2 x cinch (47k Ohms)
- 4 single-ended channels outputs via 4 x cinch (100 Ohms)
- 4 balanced channels inputs via 4 x XLR (20k Ohms)
- 4 balanced channels outputs via 4 x XLR (100 Ohms)

AES INPUTS/OUTPUTS

- 4 channels inputs via 2 x XLR (110 ohms)
- 4 channels outputs via 2 x XLR (110 ohms)

SPDIF INPUTS/OUTPUTS

- 4 channels inputs via 2 x cinch (75 ohms)
- 4 channels outputs via 2 x cinch (75 ohms)
- 4 channels inputs via 2 x toslinks

WORD CLOCK

- 1 input via BNC (75 ohms)
- 1 output via BNC (75 ohms)

PHYSICAL CHARACTERISTICS

CHASSIS: 2U


POWER SUPPLY: 240V AC / 50-60 Hz. *Option: 130V AC*

CONSUMPTION: 90 W max.

WEIGHT: above 10kg

ENVIRONMENTAL CONDITIONS:

- Temperature: 0°C – 40°C (32°F – 104°F)
- Humidity: 20% – 80% relative humidity (without condensation)

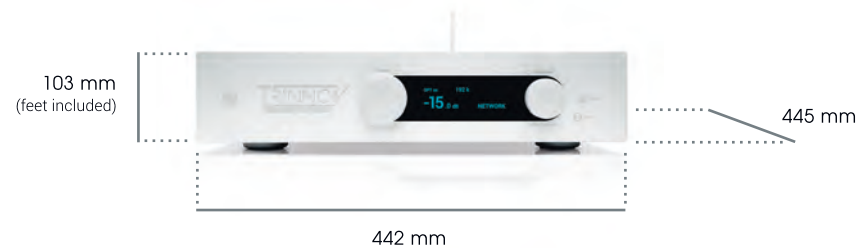






PRESENTATION

2.1	FRONT PANEL CONTROLS	14
2.2	FRONT PANEL DISPLAY	15
2.3	REAR PANEL	16
2.4	REMOTE CONTROL	17
2.5	3D MEASUREMENT MICROPHONE	18

PRESENTATION

2.1 FRONT PANEL CONTROLS

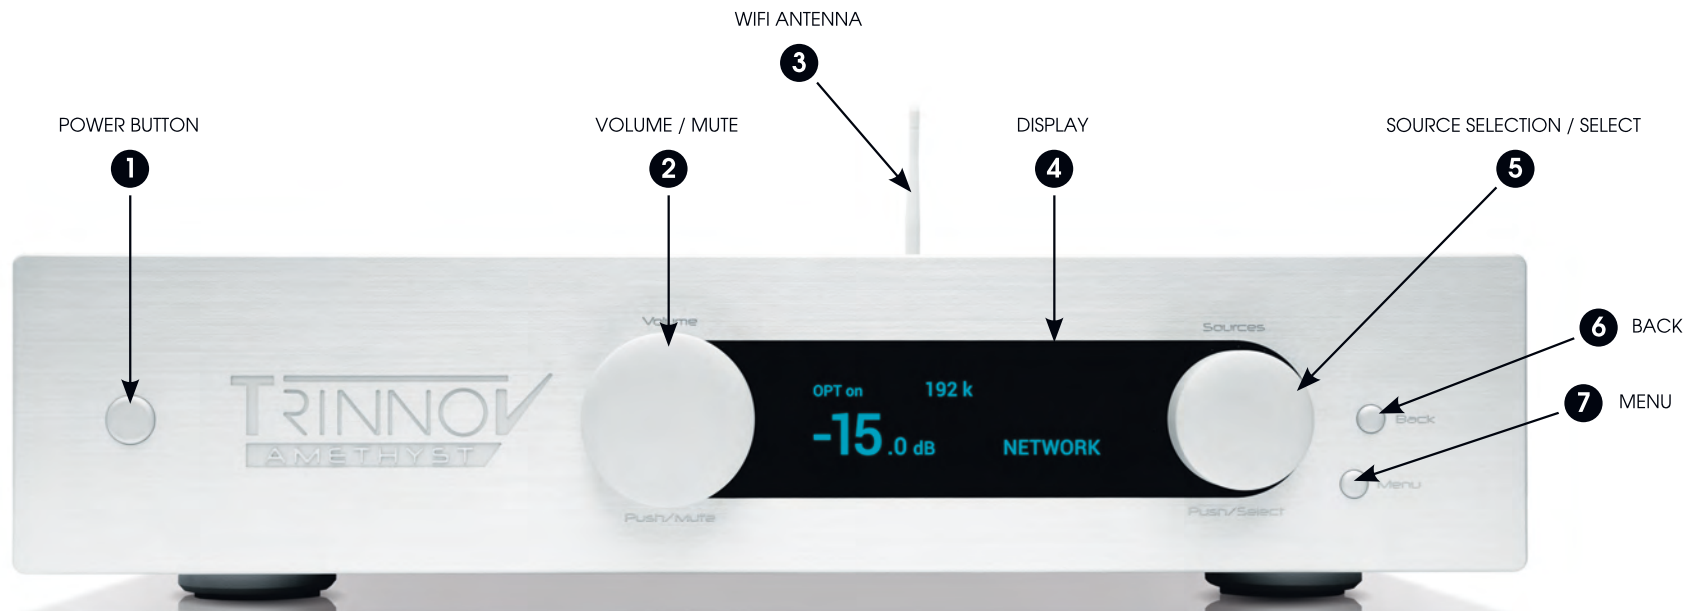

1 POWER BUTTON turns the unit on and off.

2 VOLUME CONTROL / MUTE this convenient controller is both a volume knob and a mute button.

3 WIFI ANTENNA

4 DISPLAY displays the current system status as well as the menu.

5 SOURCE SELECTION / SELECT this controller is a source selection knob and selection button to navigate the menus.

6 BACK BUTTON used to return to the previous page/menu.

7 MENU BUTTON displays the main menu.

2.2 FRONT PANEL DISPLAY

OPTIMIZATION STATUS


Indicates whether the Amethyst runs loudspeaker/room correction filters or not. The optimisation status *OPT on* does not necessarily mean that a calibration has been performed; the Optimizer may run null filters.

SAMPLING RATE

Indicates the current sampling rate of the Amethyst's clock.

OUTPUTS METERS

Output levels of the Amethyst.

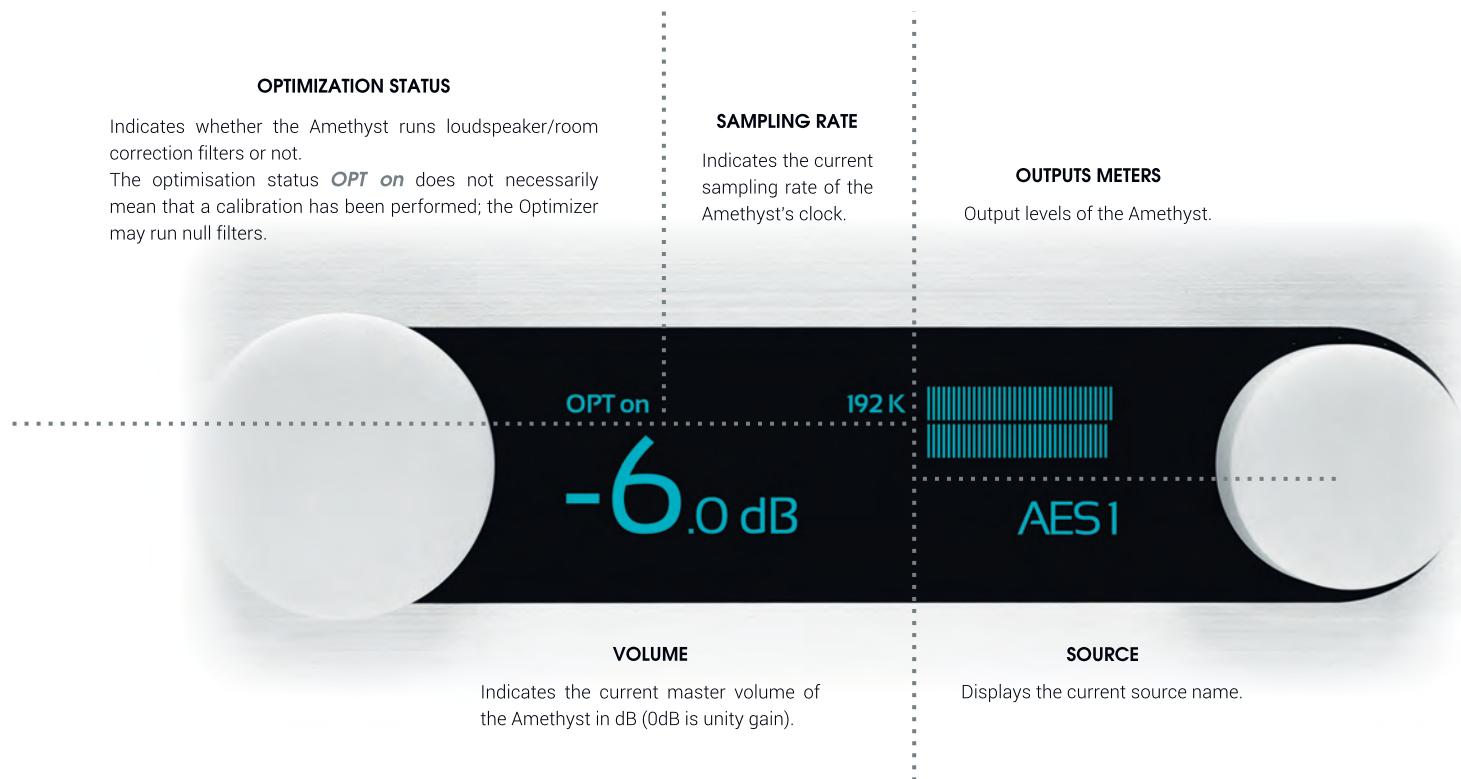

VOLUME

Indicates the current master volume of the Amethyst in dB (0dB is unity gain).

SOURCE

Displays the current source name.

2.3 REAR PANEL

Power section

POWER SOCKET T3.15 FUSE POWER SWITCH SERIAL NUMBER AND MENTIONS

WIFI ANTENNA

RS 232



DVI VGA 4xUSB (unused)

PS/2 ETHERNET

PC section

Audio section

RCA
2 coaxial SPDIF
Inputs

XLR
2 AES/EBU
Inputs

TOSLINK
2 optical SPDIF
Inputs

XLR
2 stereo analog balanced
Inputs

RCA
2 stereo analog
single-ended Inputs



XLR
2 AES/EBU
Outputs

RCA
2 coaxial SPDIF
Outputs

XLR
4 stereo analog
balanced Outputs

RCA
4 stereo analog
single-ended Outputs

WC (BNC)
IN/OUT

PHONO/LINE
Switch (ANA IN SE4)

PHONO GROUND
(ANA IN SE4)

2.4

REMOTE CONTROL

The Amethyst is provided with a 24 buttons remote control.




SOURCES SELECTION

BAL 1	Balanced analog stereo input 1 (XLR)	SPDIF 4	SPDIF coax stereo input 4 (Cinch)
BAL 2	Balanced analog stereo input 2 (XLR)	OPT 5	SPDIF optical stereo input 5 (Toslink)
SE 3	Single-ended analog stereo input 3 (Cinch)	OPT 6	SPDIF optical stereo input 6 (Toslink)
SE 4	Single-ended analog stereo input 4 (Cinch)	NETWORK	UPnP renderer
AES 1	AES/EBU stereo input 1 (XLR)	USER	User source
AES 2	AES/EBU stereo input 2 (XLR)		
SPDIF 3	SPDIF coax stereo input 3 (Cinch)		



MENU NAVIGATION

MENU	Displays the menu
BACK	Returns to the previous menu
SEL	Enters the selected menu item

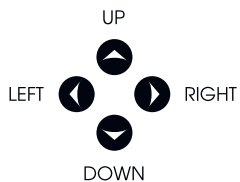

VOLUME CONTROL / BYPASS

VOL +	Increases the volume (1dB steps)	MUTE	Mutes the outputs sound
VOL -	Reduces the volume (1dB steps)	BYPASS	Disables the Optimization
DIM	Reduces the volume by 20 dB		

The remote control uses CR2032 battery.



2.5 3D MEASUREMENT MICROPHONE

The measurement microphone is one of the most critical component in the Trinnov calibration procedure.

The Optimizer's sophisticated algorithms not only rely on very accurate acoustic measurements but also on the ability to localize speakers positions and to detect early reflection origin.

The microphone consists of 4 capsules mounted at the top of thin brass tubes to avoid diffraction.

The capsules form a tetrahedron figure, ideal to identify distance, azimuth and elevation altogether with a spatial resolution below $\pm 2^\circ$ in every direction.

Consequently, capsules are identified from 1 to 4 and the microphone cables are labelled accordingly.


A led incorporated in the body of the microphone indicates the front of the microphone that should be pointed at the center of the soundstage before proceeding with a measurement.


Flat response (within $\pm 0,1$ dB across the 20Hz-24kHz frequency range) is guaranteed by individual compensation filters.

The microphone uses a standard 9V PP3 LR61 battery to power capsules and electronic.

The second purpose of the front led is to indicate the battery level.

Backside of the microphone

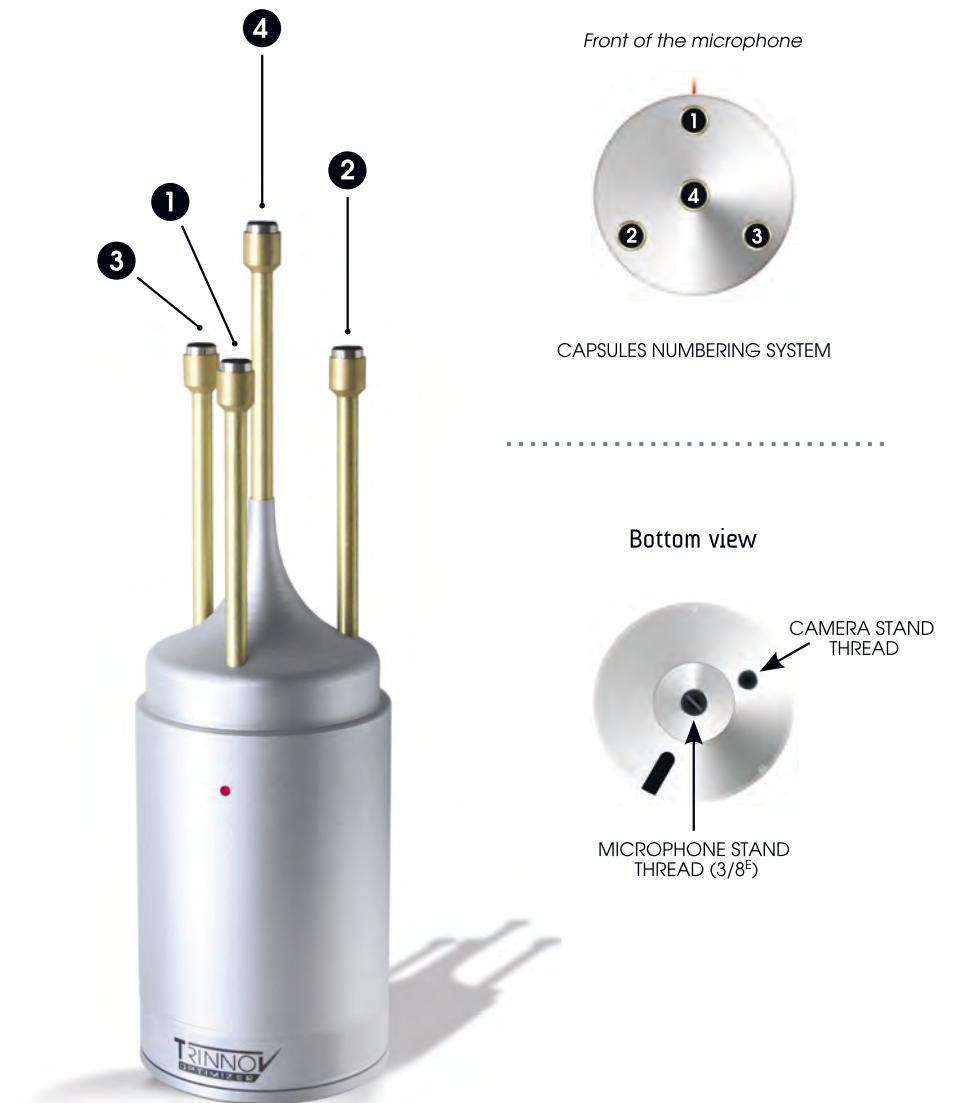

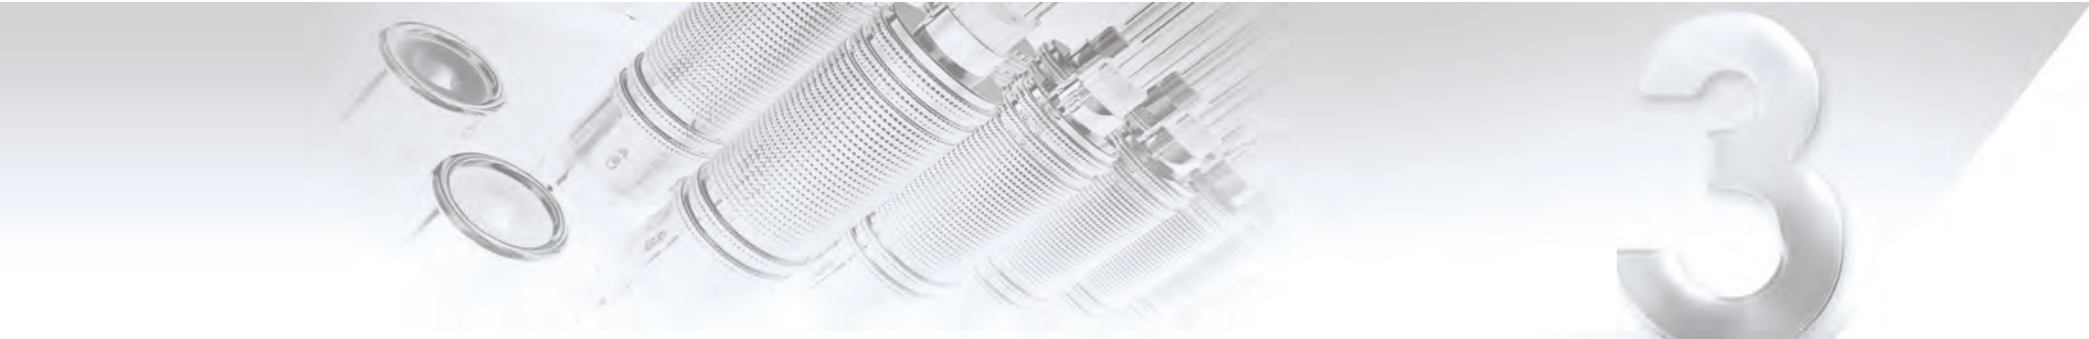

INSTALLATION

3.1	CONNECTING A SOURCE	20
3.2	CONNECTING A TURNTABLE	21
3.3	CONNECTING SPEAKERS	22
3.4	CONNECTING THE MICROPHONE	23

3.1 CONNECTING A SOURCE

Connecting a CD Player to the AES Input 1



The Amethyst allows you to connect and play any stereo source without any configuration. This example shows how to connect the AES output from a CD player to the Amethyst.



PLEASE NOTE: The network streamer feature is explained *chapter 6*.

3.2 CONNECTING A TURNTABLE



Connecting a Turntable to the Amethyst

1. Connect the Left and Right RCA outputs of the turntable to the Amethyst.
2. Connect the ground wire cable.
3. Make sure the Phono/Line switch is on the Phono position to activate the Phono Preamp and RIAA HybriD filter.



The second single-ended stereo source (SE 4) can be switched from line to phono level.





PLEASE NOTE: make sure your amplifier is turned off when you switch from phono to line levels.

3.3 CONNECTING SPEAKERS



Default output connectors for a stereo system

This image shows that any first pair of outputs should be used as default stereo system output. Please remind that these outputs play simultaneously.

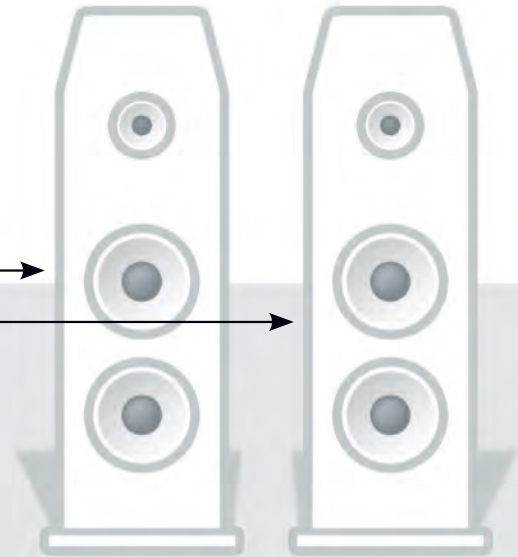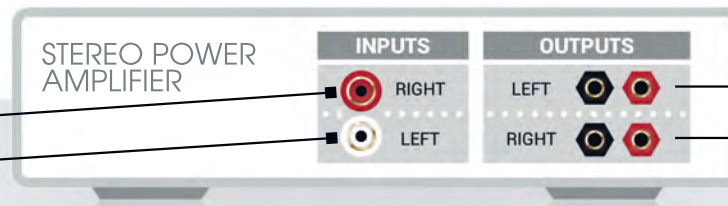


Stereo System connection example

3.4 CONNECTING THE MICROPHONE

The Trinnov 3D measurement microphone must be connected to the balanced analog inputs of the Amethyst.



IMPORTANT : Always make sure the microphone is turned OFF before you connect it to the Amethyst.

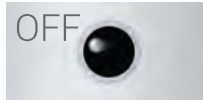

The microphone cables are labeled and numbered from 1 to 4. Please respect the connection order of the microphone, such as indicated in this figure:



Connection of the Microphone





4

FIRST STEPS

4.1	POWERING ON THE AMETHYST	26
4.2	BASIC OPERATIONS	27
4.3	NAVIGATING THE MENU	28
4.4	USING THE REMOTE CONTROL	29

4.1 POWERING ON THE AMETHYST



IMPORTANT NOTE Don't forget that the amplifier should always be powered up last.

STARTING UP



Front-Panel Startup image

Turn on the main power switch on the rear panel to supply the Amethyst with electricity, then press the front panel power button to start the Amethyst.

The system takes **45 seconds to initialize**. While the system starts, the front panel screen displays the image above.

SHUTTING DOWN



Front-Panel Extinction image

To shut the Amethyst down, press the front panel power button once. The front panel screen will then display the following image until complete stop (approximately 10 seconds).



NOTE It is not recommended to cut the AC Power, as the system saves several 'last-used' settings while shutting-down.

4.2 BASIC OPERATIONS



Volume control

- **Turn** the volume button right and left to turn the volume up and down.
- **Push** the Volume Control button to mute the outputs of the Amethyst.
- Use the Remote Control **Dim** button to decrease the volume by 20 dB.

NOTE The last-used volume is recalled at start-up.

Sources selection

- **Turn** the source selection rotary button to scroll through sources.
- **Push** the knob to select the displayed source.

Sources selection menu

Sources go left and right. Wich ones with a pen icon are editables:



The current source is displayed underlined:



Here is the result on the main display: the current selected AES 1 source is displayed at the bottom right of the screen:



4.3 NAVIGATING THE MENU


4.3.1 How to navigate the menus

The Front-Panel menu allows for basic configuration:

- **OPTIMIZER** enables and disables Optimization modes.
- **SETUP** network and bass management settings.
- **PRESETS** quick access to the saved presets.
- **ABOUT** general information.

To navigate the menus:

1. First press the **Menu** (1) button to enter the menu.
2. Turn the **Sources** (2) button to scroll the menus.
3. Push the **Select** button (3) to enter the displayed menu.
4. Press the **Back** (4) button to return to the previous page.

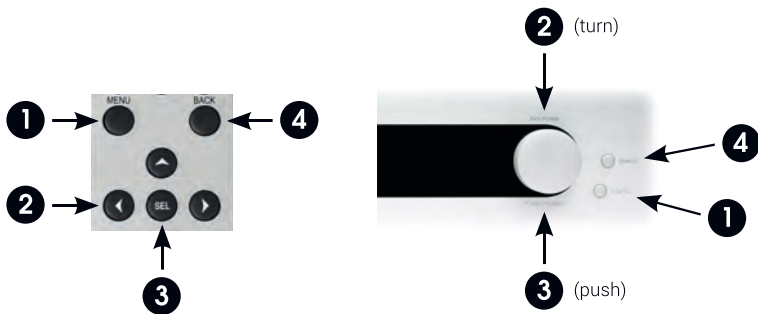

Optimizer



The Optimizer applies different kinds of corrections:

- **ACOUSTIC CORRECTION** Amplitude, phase and impulse response correction.
- **LEVEL ALIGNMENT** of every speaker.
- **DELAY ALIGNMENT** of every speaker.

Different kinds of corrections can be bypassed individually using the corresponding menu or altogether using the **Optimization** item.

The **Remapping** technology can be used to compensate for wrong speaker placement.

About




This page provides the following information about the Amethyst:

- **ID** unique 7-digits identifier.
- **SERIAL** serial number.
- **VERSION** software version.

Presets



This page allows you to quickly select a saved preset. For more information on presets themselves please refer to *chapter 7.3 « Presets Management »*.

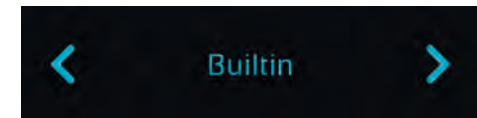

Rotate the **Source** button to choose the desired preset and confirm the change by pressing it. To exit this menu without loading another preset simply press the **back** button.

Setup



IMPORTANT


The default speaker configuration of the Amethyst does not include subwoofers. None of the following parameters are available without prior 2.1 or 2.2 calibration. Please refer to *chapter 8* for further information about the calibration procedure.

The *Speakers* sub-menu is used to enable/disable or to change the bass management mode of the system.

- OFF** No bass management is performed. Left and right speakers will reproduce the low frequency components of their respective channels, and the Subwoofer(s) will only reproduce the LFE (Low Frequency Effect) channel.
- ON** The low frequencies of the left and right channels are filtered at the cross-over frequency, and sent to the Subwoofer(s), in addition to the LFE channel.
- **Mono** This is the default standard bass management, the same signal is sent to all subwoofers.
 - **Stereo** This bass management feature maintains stereo bass:
 - the low frequencies from the Left channel is sent to the first Subwoofer (S1);
 - the low frequencies from the Right channel is sent to the second Subwoofer (S2).
 - **Send LFE to L+R** This bass management feature is useful when no subwoofer is available to monitor the LFE channel. The Optimizer will distribute equally the LFE between the L and R loudspeakers. Particular care should be taken to make sure that the monitors can handle the additional power required to reproduce the LFE.

Network

The *Network* sub-menu is explained in *chapter 5*.

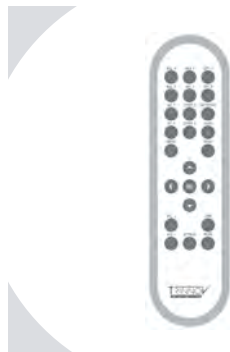

4.4 Using the remote control

First remove the cover located at the back of the remote and insert the provided CR2032 battery.

The remote control must be pointed towards the front panel of the Amethyst.



NETWORK SETUP

	5.1	OVERVIEW	32
	5.2	USING THE AMETHYST AS A WIFI ACCESS POINT	32
	5.3	USING THE AMETHYST AS A DHCP CLIENT	34
	5.4	REMOTE ACCESS TO THE GRAPHICAL USER INTERFACE (GUI)	35
	5.5	CONNECTING THE AMETHYST TO AN EXISTING WIFI NETWORK	38

5.1 OVERVIEW

The Amethyst has built-in WiFi and Ethernet to perform various actions over the network.

The Amethyst can simultaneously be part of a network as:

- a WiFi Access Point (AP) to create its own WiFi network;
- a hard-wired client to join an existing network through an Internet Service Provider (ISP) Box/Router;
- a WiFi client to join an existing wireless network.

The default configuration of the Amethyst is 'WiFi Access Point + WiFi Client'.

The following actions can be achieved through the network provided that both the Amethyst and the other devices are part of the same Local Network:

- The advanced Graphical User Interface (GUI) of the Amethyst can be accessed from any computer, tablet or smartphone using a VNC client;
Please refer to chapter 5.4 for further details
- High Resolution files can be streamed to the Amethyst from a UPnP server.
Please refer to chapter 6 for further details



IMPORTANT NOTE

If the Amethyst is to connect wirelessly, the supplied WiFi Antenna must be fitted to the WiFi Antenna Socket located on the rear panel.


5.2 USING THE AMETHYST AS A WIFI ACCESS POINT

The Amethyst Access Point details are available in the **Setup > Network > WiFi** page of the Front-Panel menu:



Setup > Network > WiFi

The Amethyst AP should appear in the WiFi Networks list of your tablet/smartphone/computer under the name "Amethyst-xxx" where xxx is the serial number of your Amethyst.

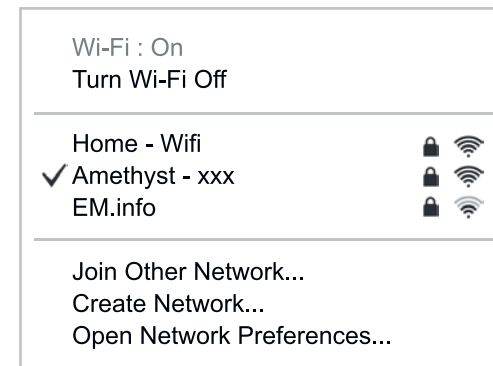

WiFi Networks List - Mac OS X


Once you've selected the Amethyst Access Point, you must enter the default password "**calibration**" to establish the connection.



IMPORTANT NOTE

Other devices must also be connected to the Amethyst WiFi Access Point to be able to communicate and therefore perform any operation.

Amethyst as WiFi Access Point

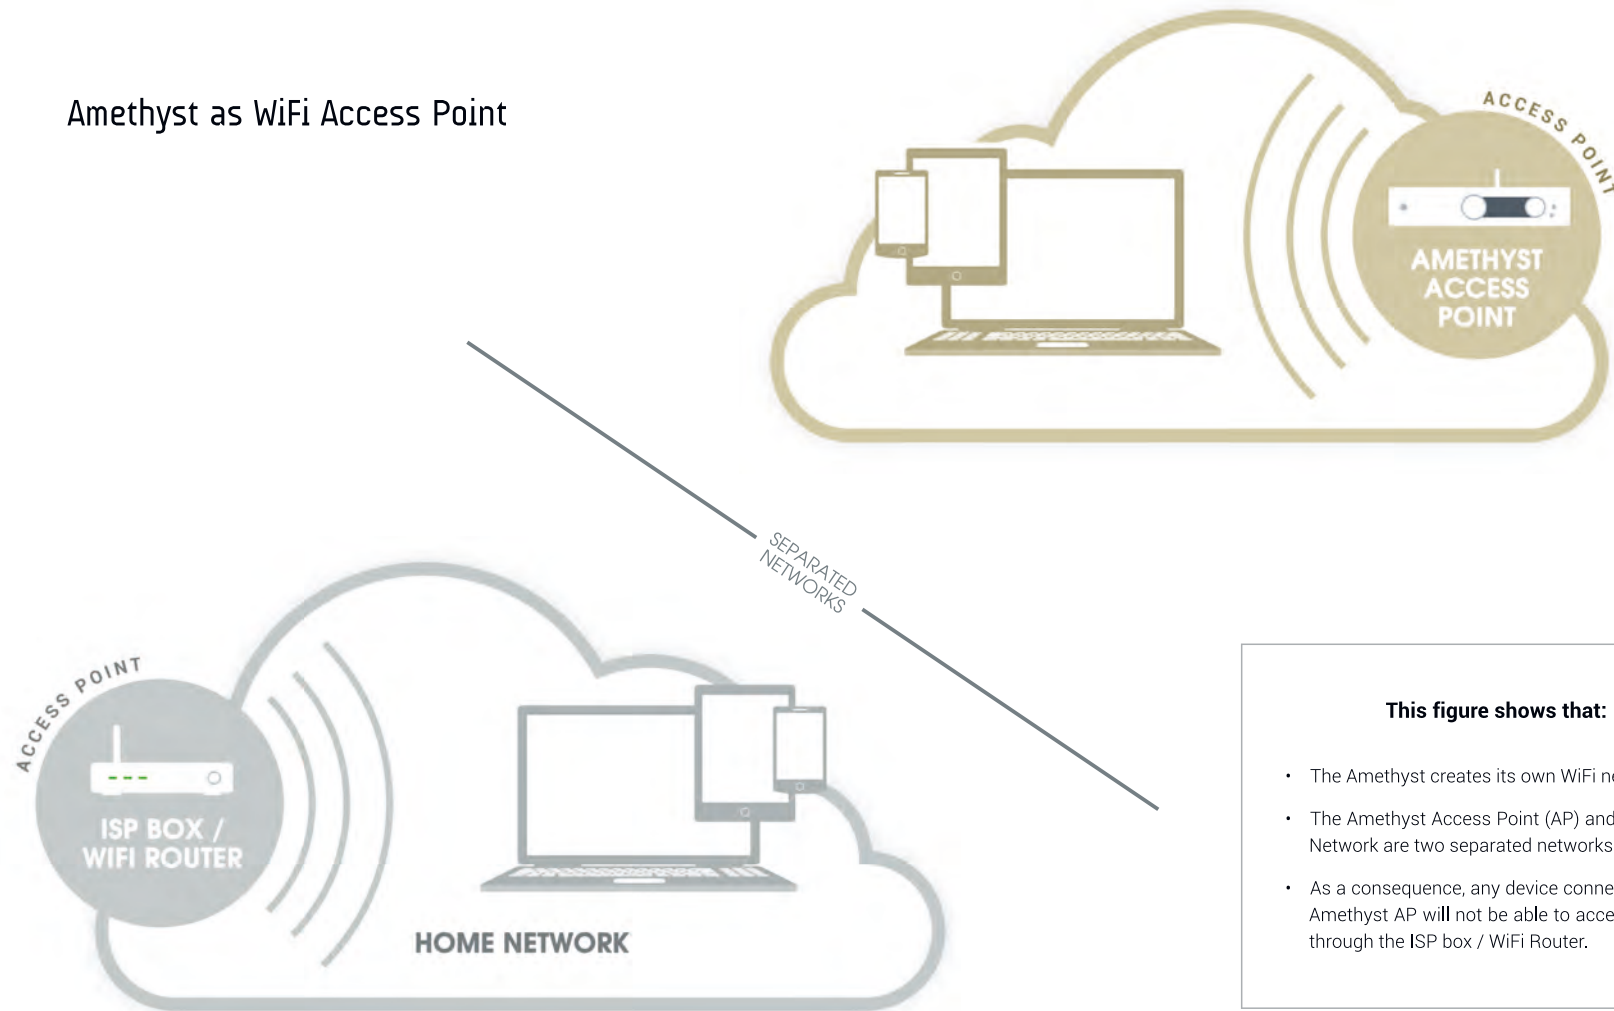

This figure shows that:


- The Amethyst creates its own WiFi network.
- The Amethyst Access Point (AP) and the Home Network are two separated networks.
- As a consequence, any device connected to the Amethyst AP will not be able to access internet through the ISP box / WiFi Router.

5.3 USING THE AMETHYST AS A DHCP CLIENT


The default Ethernet mode of the Amethyst is set to DHCP client, meaning that it will automatically be detected on most domestic networks.

This figure shows that:

- The Amethyst is hard-wired to the ISP Box / WiFi Router.
- This same ISP Box / WiFi Router is the Access Point of the Home Network.
- Potential control devices (laptops, tablets and smartphones) are connected to the ISP Box through the WiFi.
- As a consequence, control devices are able to communicate with the Amethyst over the network and access Internet.

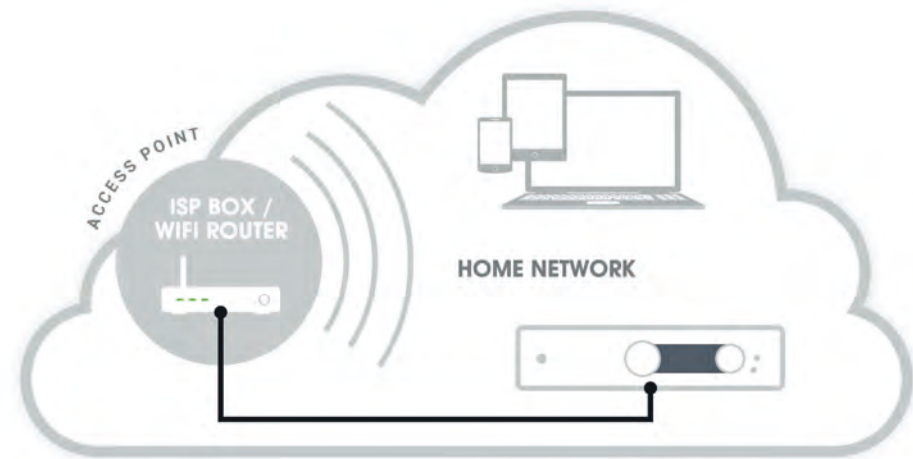

The Amethyst Ethernet Connection details are available in the **Setup > Network > Ethernet** page of the Front-Panel menu:

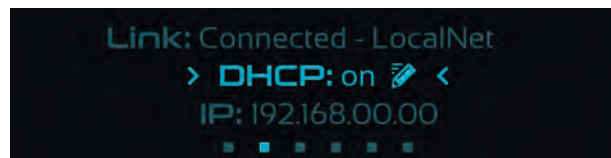

Setup > Network > Ethernet page



NOTES:

- This configuration only works if the WiFi router includes an active DHCP server.
- With ISP Box standard firewall settings, this configuration should allow the Amethyst to reach Trinnov Audio's server for software updates through Internet.

5.4

REMOTE ACCESS TO THE GRAPHICAL USER INTERFACE (GUI)

The Amethyst has a built-in VNC server that allows you to fully control the Optimizer from any VNC client host device over the network.

5.4.1 About VNC

VNC is a graphical desktop sharing system that transmits the keyboard and mouse events from one computer (server) to another (client), relaying the graphical screen updates back in the other direction, over a network.


In other words, VNC provides full control of the Amethyst from a tablet, smartphone (iOS, Android, Blackberry, Nokia...) or laptop (PC, Mac or Linux).

You can find different VNC Clients/Viewers on Internet/Application stores:

Windows®:	TightVNC
MAC OS:	Chicken of the VNC
iOS/Android:	Mocha VNC Lite



VNC control from Windows® 7

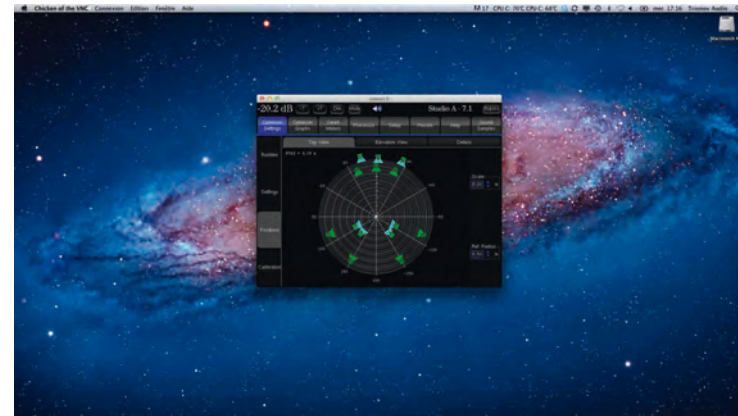


VNC control from Mac OS X

5.4.2 VNC Connection


First install the VNC client application on the device you want to control the Amethyst from. Make sure this device is connected to the same network (either wired or wireless network).

The VNC Client will ask you to enter the following informations: the server address (or host depending on the application) + a display port + a password.

Some client automatically displays the available server's list:

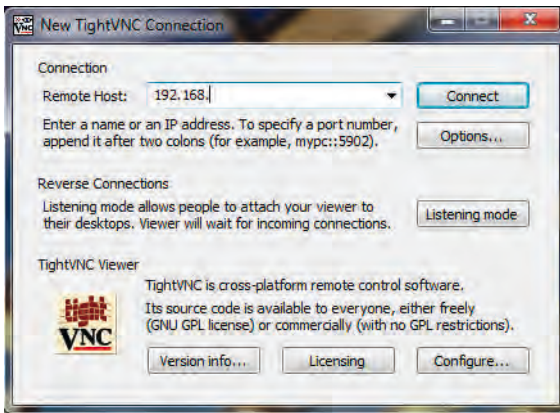


"TightVNC" Login Panel (Windows 7®)

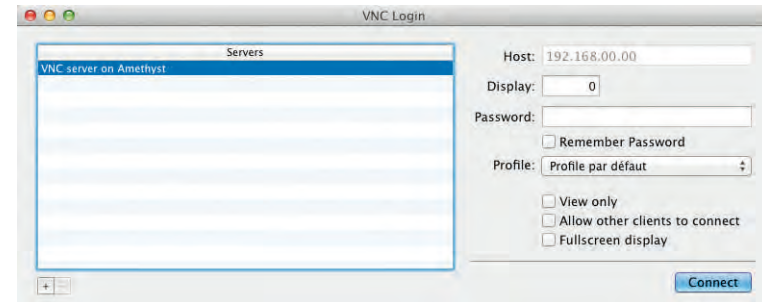


Chicken of the VNC available server's list

The example above shows the connection screen of the VNC client for Mac "Chicken of the VNC". In that case, the server address is automatically filled out.

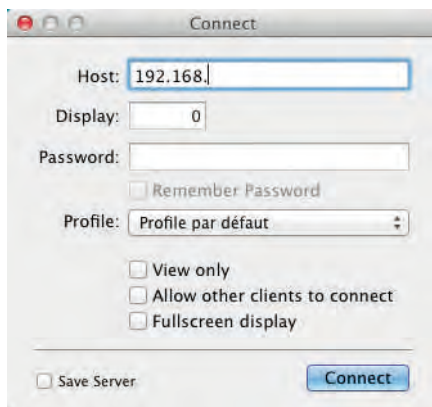

"Chicken of the VNC" Login panel (Mac OS X®)

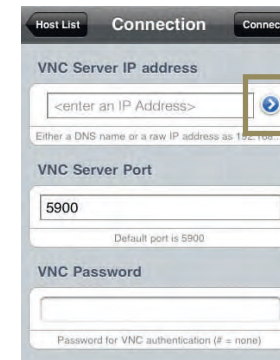

Mocha VNC Lite available server's list

Likewise, the blue arrow displays the available servers list on the VNC client for iPhone/iPad "Mocha VNC Lite".

Server Address

The server address is the IP address of the Amethyst:

- The Ethernet IP address if the Amethyst is hardwired to the local network.
- The WiFi IP address if the VNC client is connected to the Amethyst AP.


Setup/Network/Ethernet page



Setup/Network/WiFi page



IP addresses can also be retrieved from the graphical interface in the **Setup/Network** page:

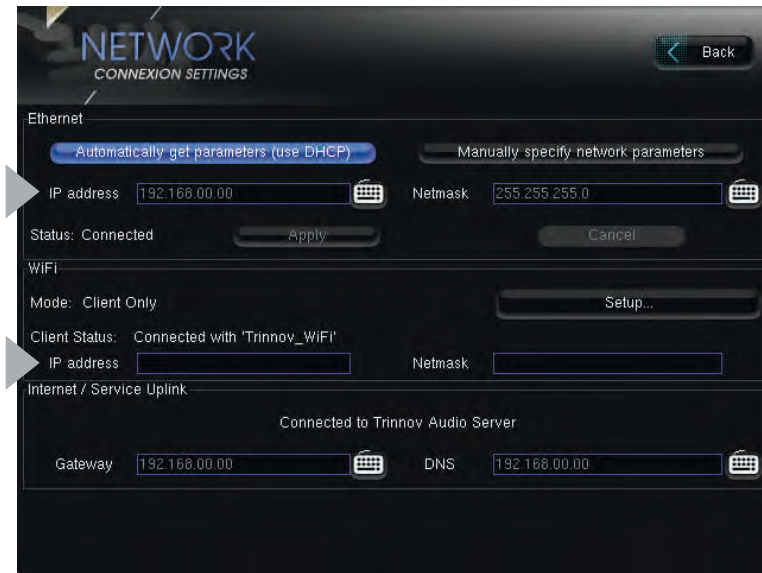

Display Port

Depending on your VNC client, the default display port must either be set to 5900 or 0.

Password

The password is the 7-digit ID number available in the **About** page of the Front panel:

About page




5.5

CONNECTING THE AMETHYST TO AN EXISTING WIFI NETWORK

5.5.1 Introduction

Unlike using the Amethyst as an Access Point or DHCP client, connecting the device to a home network as a wifi client requires some configuration. This is the most flexible and comfortable network configuration since it allows both controlling and streaming to the Amethyst from a smartphone or tablet while keeping the access to internet, without any cables.

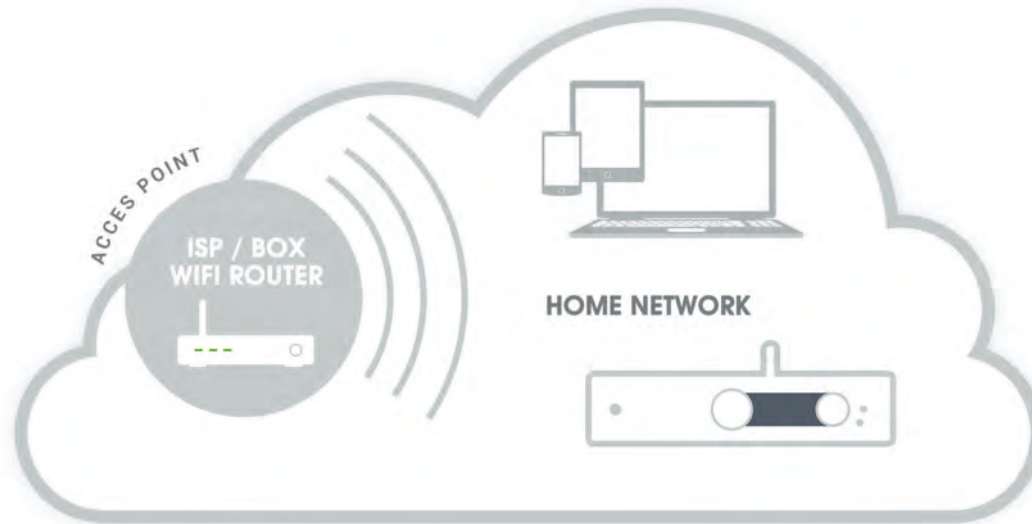

This figure shows that:

- The Amethyst is part of the home network, like any other laptop, smartphone or tablet connected to the home WiFi via Wireless connection. It should be noted that, if the box is the WiFi Access Point, the Amethyst will be able to communicate with Trinnov Audio's servers.
- The WiFi AP of the home network is also the ISP Box; any devices controlling or streaming to the Amethyst can also access Internet.
- The Amethyst can also be hard-wired to the WiFi router (using the DHCP protocol, please refer to *chapter 5.3* for further details).




NOTE There are 3 WiFi modes that can be selected in the **Settings > Network > WiFi Setup** page:

- **OFF** the WiFi module of the Amethyst is disabled.
- **FULL** (default) the Amethyst is both used as an Access Point and a Client.
- **CLIENT** the Access Point is disabled but the Amethyst still operates as a WiFi client as long as the configuration is valid.

5.5.2 Using the Graphical User Interface


1. In the **Settings/Network** page, hit the **Setup...** button to display the **WiFi configuration** page.
2. Select the required **WiFi mode**. **FULL** is the default mode (Access Point + client) but only works as an Access Point until the WiFi client is configured.
3. Whether you selected the **FULL** or **CLIENT** mode, the **Connect** button displays the available WiFi Access Points.
4. The **Encryption** column displays a locker icon when the network is protected by a passphrase and/or encrypted.
5. The **Signal** column displays a WiFi signal icon, indicating the strength of the WiFi signal.
6. If you select an encrypted Access Point, you will be asked a passphrase.

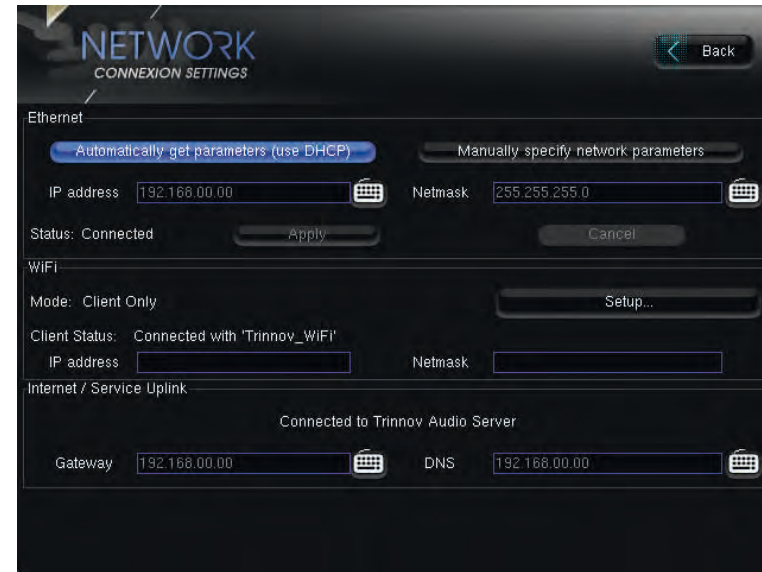

Settings > Network Page





WiFi Settings Page

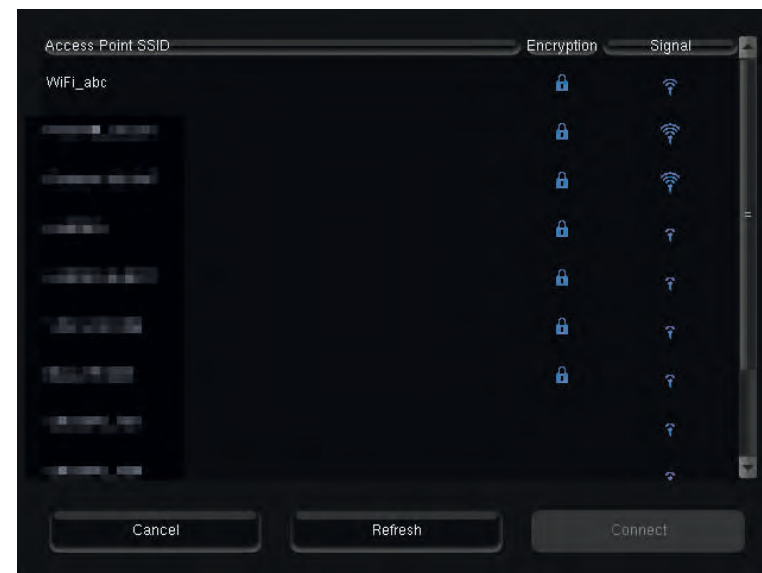

Access Point list

5.5.3 Using the Front Panel Display

AMETHYST WIFI CLIENT MODE

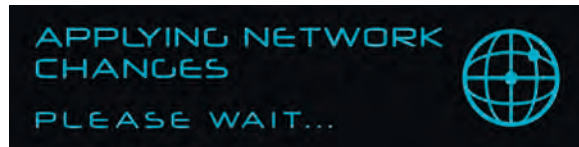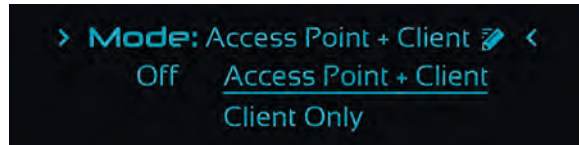

Mode page

The WiFi mode of the Amethyst can be changed in the *Setup > Network > WiFi > Mode page* of the menu.

Just like in the Graphical User Interface, you can select the WiFi mode.

To use the Amethyst as WiFi client, select the *Access Point + Client* or the *Client Only* mode.

Applying Network Changes

This image will be displayed while the Amethyst applies the network changes.

Connection

Go back to the WiFi menu and select the *Connection* item to configure the client.

Select the WiFi network

Rotate and push the Sources/Select button to initiate the connection with the required WiFi network.

Enter the password

1. Select the *Letter* item and push the Sources/Select button;
2. Rotate and push the Sources/Select button to select the required letter and confirm your choice;
3. Repeat 1 and 2 until completion of the password;
4. Select *Ok* and push the Sources/Select button to confirm the password;
5. The Amethyst will inform you about the connection status of the WiFi client or display an error message if you entered a wrong password;
6. Use the *Prev.* and *Next* items to move the cursor and the *Del.* item to delete the last letter.



NETWORK STREAMING

	6.1	THE UPNP PROTOCOL	42
	6.2	UPNP NETWORK ARCHITECTURE	42
	6.3	LIST OF RECOMMENDED UPNP SOFTWARES	44

6.1 THE UPNP PROTOCOL

The Amethyst network streamer feature is based on the Universal Plug and Play (UPnP) set of networking protocols. In the UPnP/DLNA terminology, the Amethyst is a UPnP Digital Media Renderer device and is used as a slave equipment to play media content sent through the network.

The Amethyst must be used with DLNA/UPnP compatible server and controller devices. The Media Server shares its media library on the network with UPnP clients. The Media Controller is the master device, used to automatically detect servers and to control the diffusion of audio files on slaves devices.

Provided that the server supports these formats, the Amethyst decodes and play high-resolution music files : 24bits / 192kHz WAV, AIFF, FLAC and up to 16bits / 192kHz OGG.

6.2 UPNP NETWORK ARCHITECTURE

This architecture represents the most common and comfortable method to play media files in a domestic environment:

- A NAS (Network-Attached Storage) or a computer is used as UPnP server and shares the media library: it is the UPnP server.
- The library is browsed from a Media Controller, installed on a tablet, a laptop or a smartphone: it is the UPnP controller.
- The Amethyst is selected as rendering device from the Media Controller: it is the UPnP renderer.




NOTE

Most NAS are UPnP compatible servers but any computer can be turned into a server provided that a compatible UPnP server software is installed.

Several applications can turn smartphone and tablets into UPnP controllers or UPnP servers.

UPnP Network with a Digital Media Controller

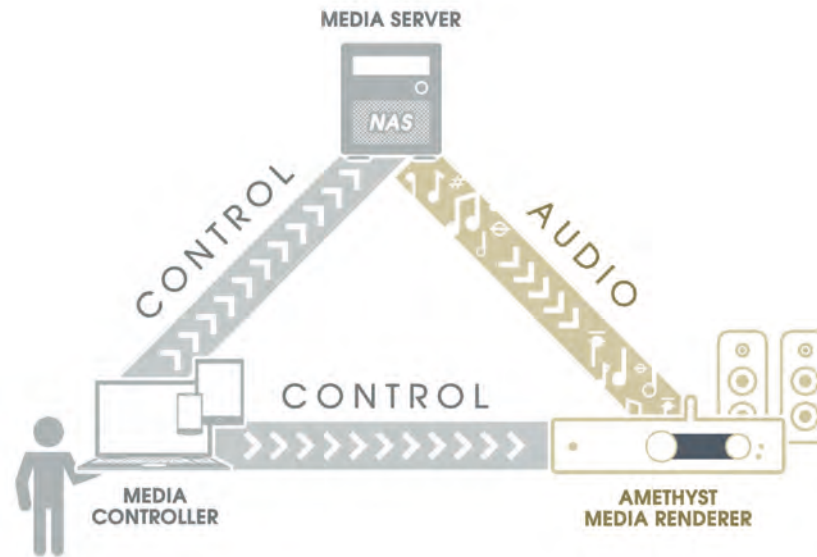

UPnP Network with a device used as server and controller

The following figure shows another architecture where a same device is used as both server and controller.



6.3 LIST OF RECOMMENDED UPnP SOFTWARES

The Amethyst is a UPnP renderer. Unlike a autonomous UPnP player, the Amethyst cannot be used to browse a library, create playlists and control audio playback. That's why we have established a shortlist of UPnP third-part softwares optimized for audio.

JRiver
MediaCenter

PS Audio
eLyric Music Manager

These softwares have been selected, tested and qualified based on the following requirements:

- ✓ UPnP Server & Controller
- ✓ 24 bits / 192 kHz playback
- ✓ Bit-perfect streaming
- ✓ WAV / AIFF / FLAC / OGG support
- ✓ Album cover art display
- ✓ User-friendly graphical user interface

6.3.1 Servers & Controllers

JRiver MediaCenter

www.jriver.com

JRiver Media Center is a comprehensive media player and UPnP platform that can be used as both server and controller. This software is therefore a perfect match for the Amethyst.

JRiver Media Center is a commercial software available for PC and Mac.
DOWNLOAD > www.jriver.com/download.html

JRiver Media Center 18 - Home Screen



JRiver MediaCenter version 18 may differ from older versions.



SERVER
&
CONTROLLER

By default, JRiver's UPnP server feature is not enabled and allows transcoding. Please note that Jriver's menus refer to DLNA instead of UPnP.

Open the **Tools > Options** menu and select the **Media Network** menu item to configure UPnP.



JRiver Media Center 18 > Tools > Options > Media Network

ACTIVATION


1 Enable the UPnP server.

Tick the **Use Media Network to share this library and enable DLNA** box and write down the Access Key.



CONVERSION

2 Configure the server conversion mode:

Configuring the server conversion mode ensure the best quality for the audio reproduction. To do so, click on the **Add or configure DLNA servers...** button. Open the **Audio** menu and select the **Mode : Original** option.

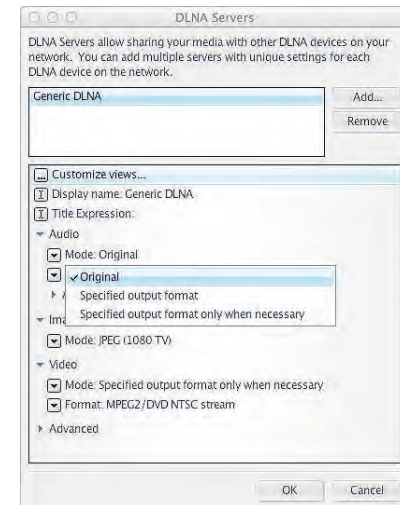


Go to the **Tools > Import** menu and follow instructions to import new content.

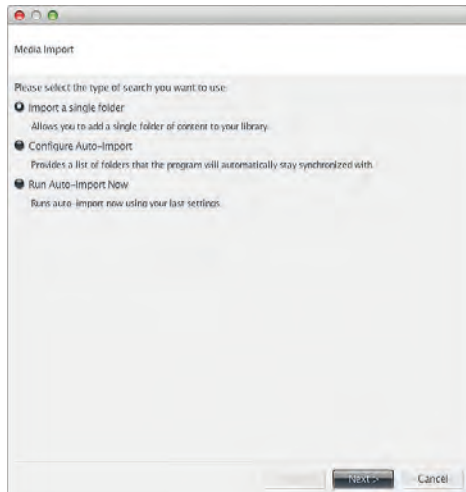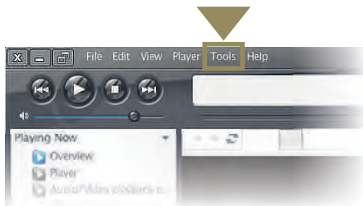


Import window

Amethyst Queue list


Local Audio Library (server)

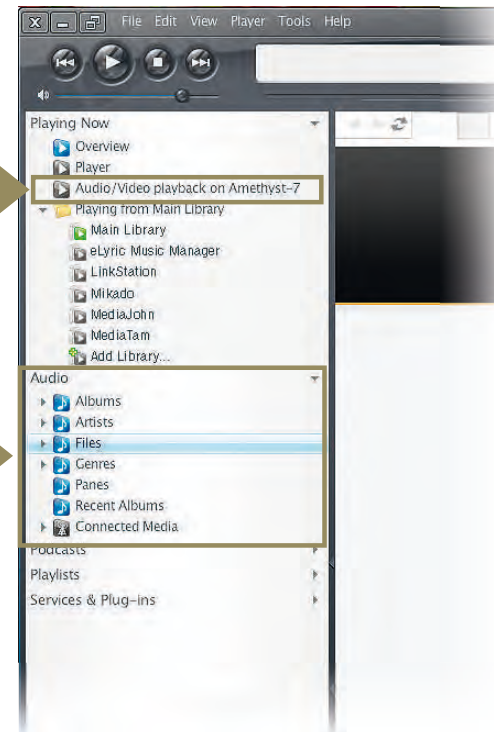

Drag and drop audio from your library to the Amethyst queue list :

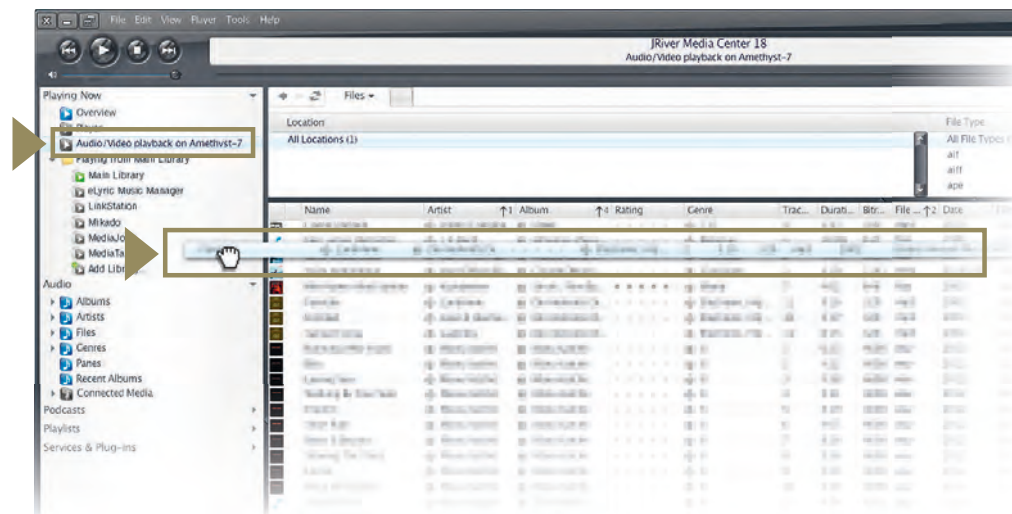

...the following menu appears :

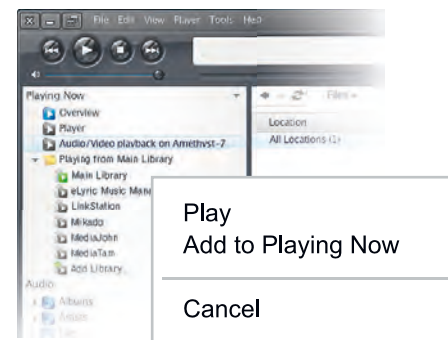

Play makes the Amethyst play the first file of your selection instantly.

Add to Playing Now adds the selected files to the Amethyst queue list.

Click on the Audio / Video playback on 'Amethyst-xx' file to display and control the Amethyst's queue list.



Select the network source of the Amethyst to listen to the network stream.

PS Audio eLyric Music Manager

www.psaudio.com

eLyric Music Manager is a free alternative media manager developed by PS Audio.


Also available for Windows® and Mac, it can be used as both UPnP server and controller.

DOWNLOAD > www.psaudio.com/products/audio/elyric-manager



SERVER
&
CONTROLLER


eLyric Music Manager - Home Screen

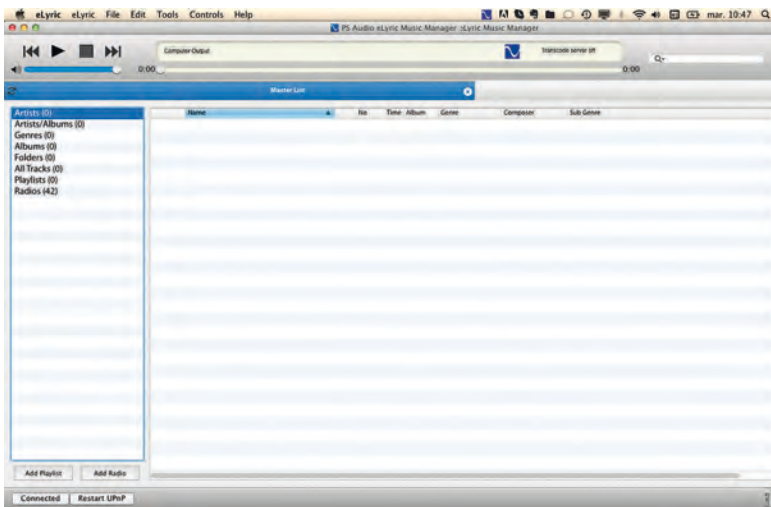

The eLyric Music Manager *Home* Screen displays an empty playlist.

The menu *File/Add a library* allows you to create a new library and import new music content.

eLyric Music Manager - Play with menu

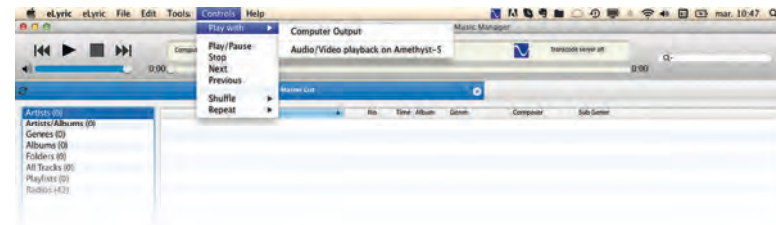

The menu *Control/Play with* allows you to select the rendering device. Provided that eLyric Music Manager and the Amethyst are part of the same network, the Amethyst will be listed as rendering device under the name Audio / Video playback on Amethyst-xxx (xxx: Amethyst's serial number).

1. Select the Amethyst as rendering device in eLyric Music Manager.
2. Play any track from eLyric Music Manager; it will be streamed to the Amethyst.
3. Select the Network source of the Amethyst to listen to the network stream.

5.4.5 Controllers

Except JRemote, the following applications can be used to control any server, including UPnP compatible NAS.



JRemote for JRiver MediaCenter




Dedicated applications can be used to remotely control JRiver:

- **JRemote** for iPad, iPhone and iPod Touch. www.jremote.net
To control JRiver MediaCenter from a mobile Apple Device
- **Gizmo** for Android™ platforms (free). wiki.jriver.com/index.php/Gizmo
Gizmo is not described in this User Guide. Its association with JRiver MediaCenter is also based on an access key.




1. First make sure your device is on the same network as JRiver and the Amethyst.


As you launch JRemote, go to the *Settings* page to link JRemote to your server. Press the *Add a new JRiver Media Center server* button to link JRemote to your server.

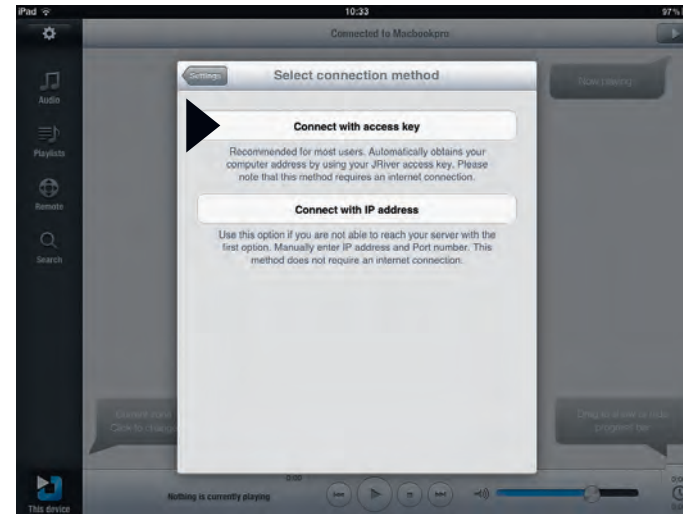

2. Select the *Connect with access key* option.

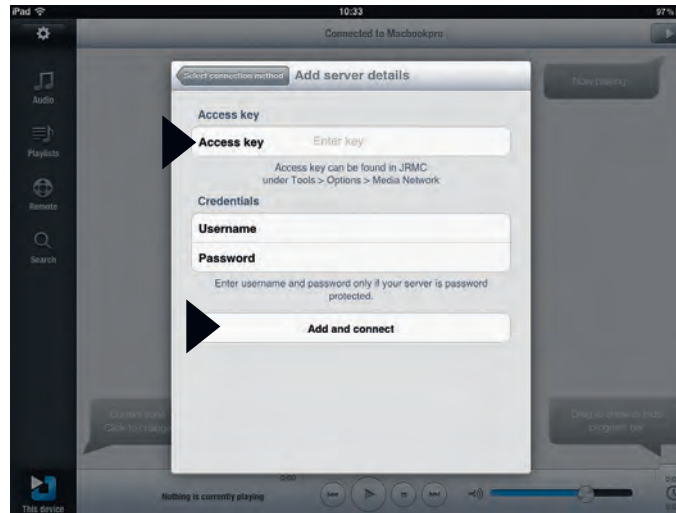

3. Enter the Access key of your server and press the **Add and connect** button. JRemote can now access your JRiver Media Center library.

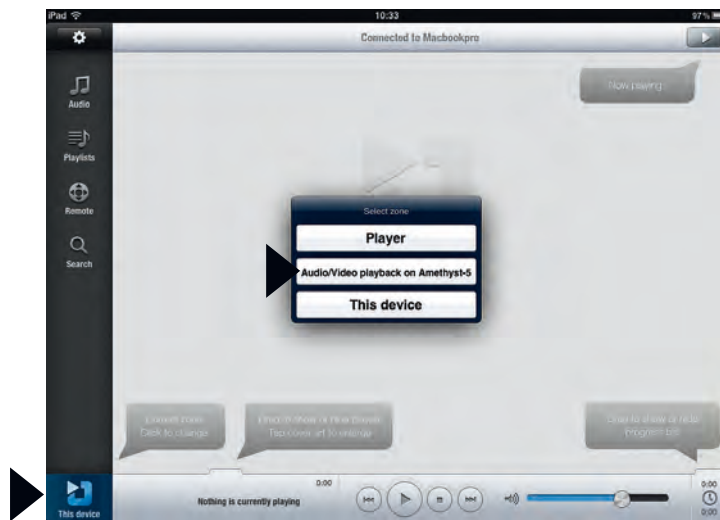

4. To select the Amethyst as rendering device: Press the bottom left button to display the **Select zone menu**. Select the Amethyst.




5. The bottom left area now displays Audio / Video playback on Amethyst.




BubbleUPnP (Android) for any UPnP Servers

1. Select Devices

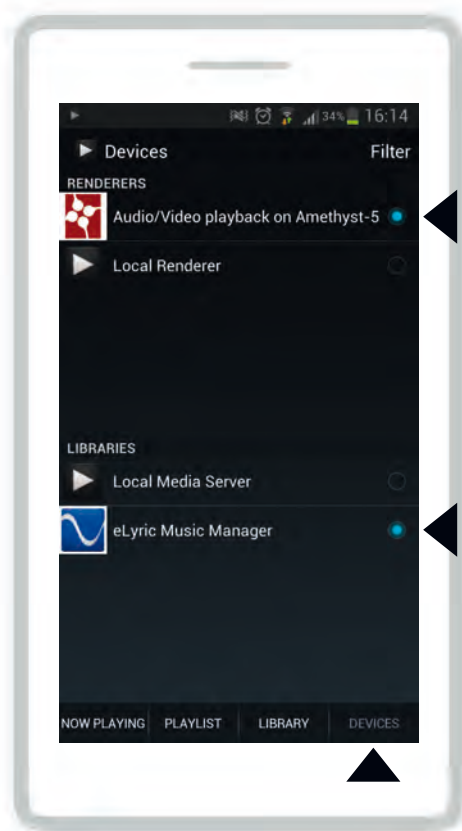


2. Browse the selected server's library

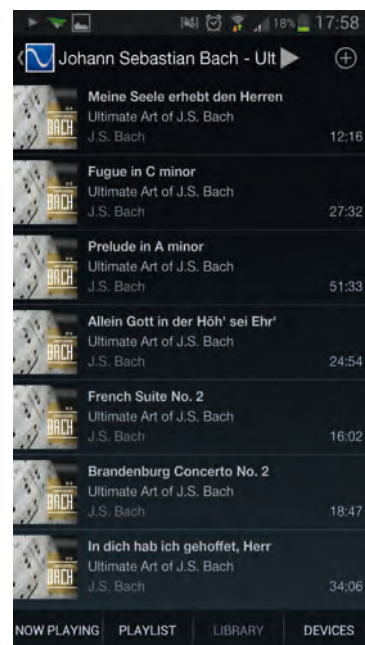


Add the whole folder
to the play queue

3. Selected Renderer's play queue

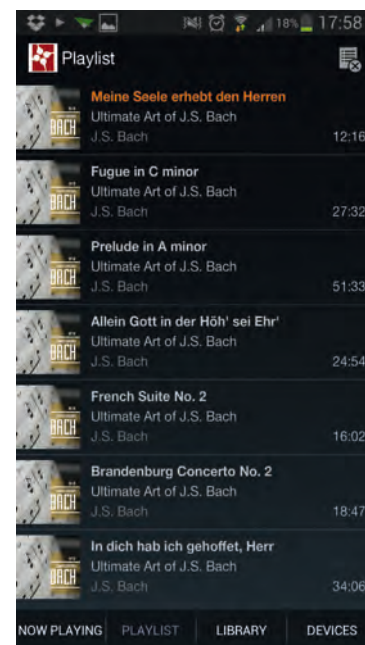

Clear the play queue


4. Now playing

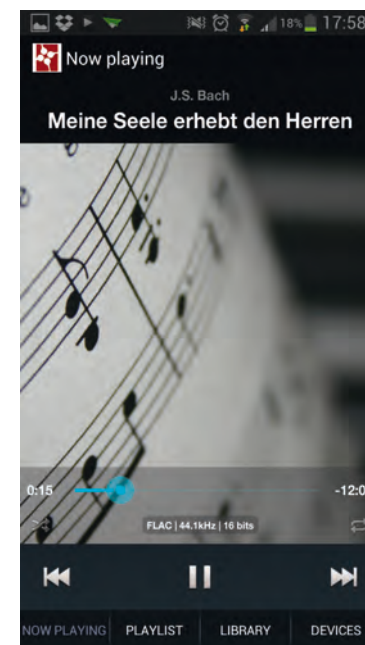




DixitDMC (iPhone) for any UPnP Servers

1. Select a Renderer

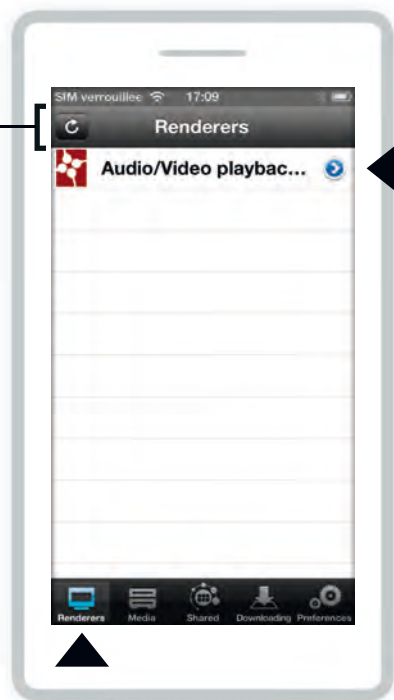


Refresh Renderers list

2. Amethyst's empty playlist

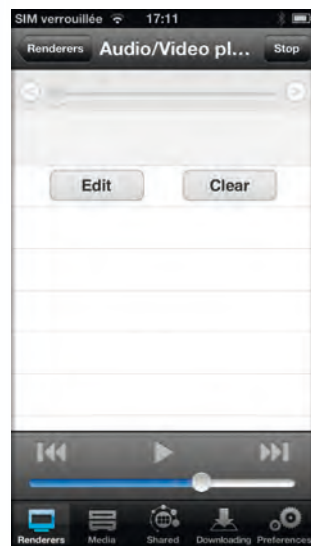


3. Select a Server

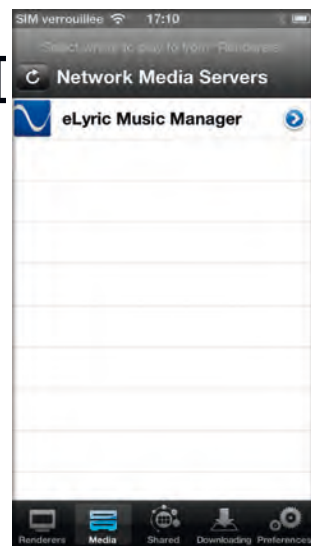


Refresh Servers list

4. Browse the server's Library

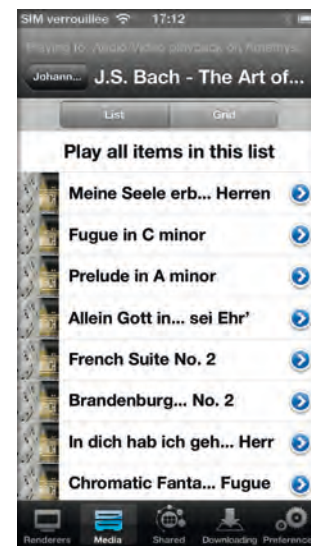

5. Amethyst's new Playlist. Enjoy...

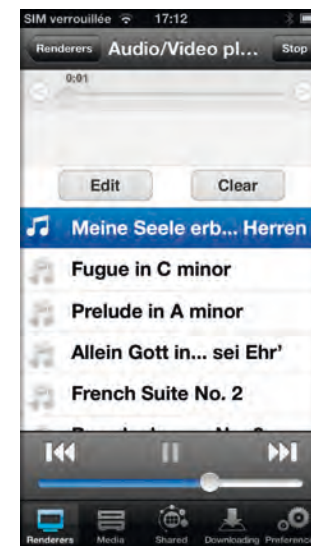

PRESETS

BACKUP / RESTORATION

AUDIO BUFFER SIZE

CLOCK

POWER-ON DEFAULT

SOURCES

INPUTS/OUTPUTS CONTROL

EQ EDITION

USB BACKUP

PRESETS MANAGEMENT

CHANNELS




ADVANCED PREAMPLIFIER SETUP

	7.1	OVERVIEW	56
	7.2	SETTING UP THE AUDIO CLOCK	58
	7.3	SOURCES CONFIGURATION	59
	7.4	PRESETS MANAGEMENT	61
	7.5	POWER-ON DEFAULT SETTINGS	62
	7.6	USB BACKUP RESTORE	63
	7.7	CHANNELS SETTINGS	64

7.1 OVERVIEW



You can access to the Advanced preamplifier settings on the home page by pressing the *Setting* button.

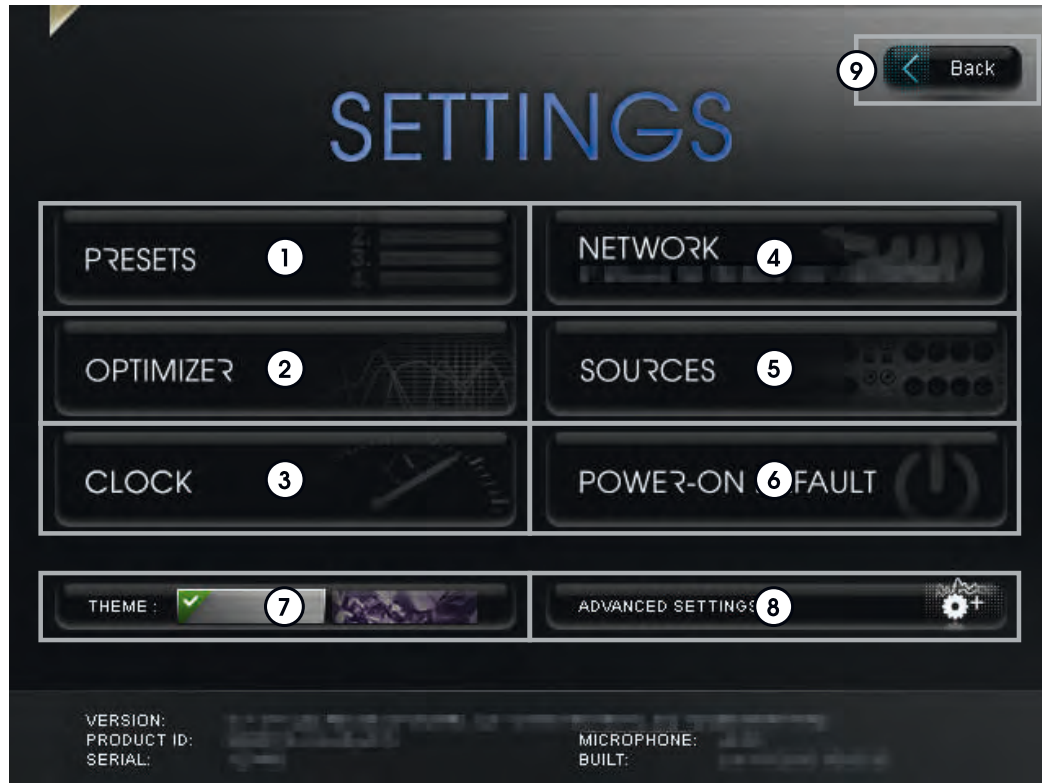

- ① Rename, save, copy or delete presets.
- ② Access to the wizard, The first step to your Optimized world, via the *Optimizer* menu.
- ③ Internal or external Audio Clock are ajustables in the *Clock* menu.
- ④ Manage the Amethyst connectivity with *Networks* settings.
- ⑤ Name and Organize audio inputs with the *Sources* menu.
- ⑥ Choose your preferred parameters to load on start-up.
- ⑦ Skin template selection.
- ⑧ Unleashed the full power of your Optimizer with the *Advanced settings* menu.
- ⑨ Back to the Home page.

7.2 SETTING UP AUDIO CLOCK



Home > Settings > Clock

The *Status information* frame displays the current and detected sample rate. Its purpose is to indicate whether or not the Amethyst is correctly synchronised.

The *Clock mode* frame proposes two modes: **Slave & Master**.

- In **Slave** mode, the Amethyst synchronizes itself on an external clock signal emitted by an SPDIF or AES audio signal from a digital transport, or by an external dedicated world clock. The choice of the clock signal is done in the *Clock Source* frame.
- In **Master** mode, the Amethyst uses its own internal clock for synchronization. This is the default mode for the Network music playing. As a consequence, the *Clock Source* parameters become unavailable since the Slave mode synchronization does not apply.

Clock mode and *Clock Source* frames have a *Stored in Preset* button to store the current parameters in the current preset. You still have to save the preset to permanently set that configuration on a preset change or after an Amethyst shutdown/startup sequence.

In the *Audio Buffer Size* frame you can select the audio buffer size. A bigger buffer allows to prevent loss of synchronization due to unregular incoming audio flow, but as a counterpart the processing time delay is longer.

The *CPU Load* frame provides an estimation of processor's usage. If the message isn't CPU load OK there is a risk of synchronization loss. That phenomenon can be attenuated by selecting a bigger audio buffer in the *Audio Buffer Size* frame (see explanation above).

7.3 SOURCES CONFIGURATION

Home > Settings > Sources



A One vertical tab per source (profile) on the left. **B** Source-specific parameters on the right.


The *Sources Configuration* screen allow you to manage up to 12 sources, wich will be displayed on the start screen.

For each source, you can:


- 1 **Edit its name** with the *Edit name* button;
- 2 **Choose its icon** displayed on the home page: by clicking on the button under the back button, a new page opens where you just have to click on the desired icon and confirm your choice by pressing the *Close* button;
- 3 **Choose the input connector** used among the analog (Balanced and Single Ended), digital (S/PDIF, optical or AES) and network. The selection is done via the listbox labelled *Input Connectors*;
- 4 **Set up the clock.** Note that the clock defined in the *Source* menu will prevail on the clock defined in the preset;
- 5 **Choose the preset to use;**
- 6 **Setting up the FIR EQ** (available in the *Advanced Settings*. Please refer to a Trinnov certified installer) used by this source:
 - Select *No Change* to keep the current FIR EQ
 - Select *None* not to use FIR EQ
 - To use the FIR EQ stored in the preset assigned to the source, use *As in preset*.
- 7 **Choose the User EQ** used by this source:
 - Select *No Change* to keep the current User EQ,
 - Select *None* not to use User EQ,
 - To use the User EQ stored in the preset assigned to the source, use *As in preset*,
 - For more information on User EQ, please refer to *chapter 7.6*.
- 8 **Choose the Input Levels Sensitivity.** This parameter can be used to adjust input levels and achieve a consistant playback level for every source.

FIR EQs and User EQs are optional manual EQs.

Virtual keyboard

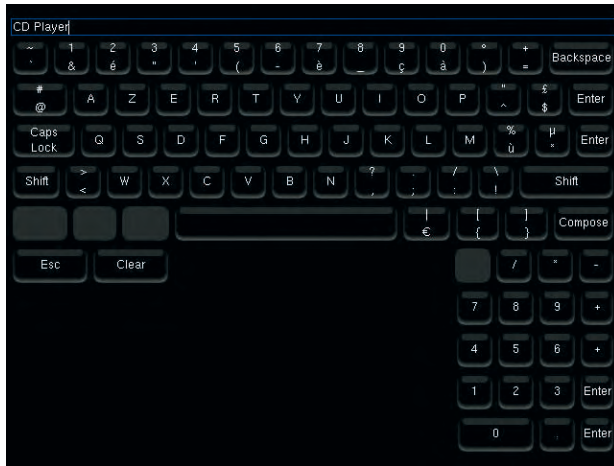

Assign an icon to a source

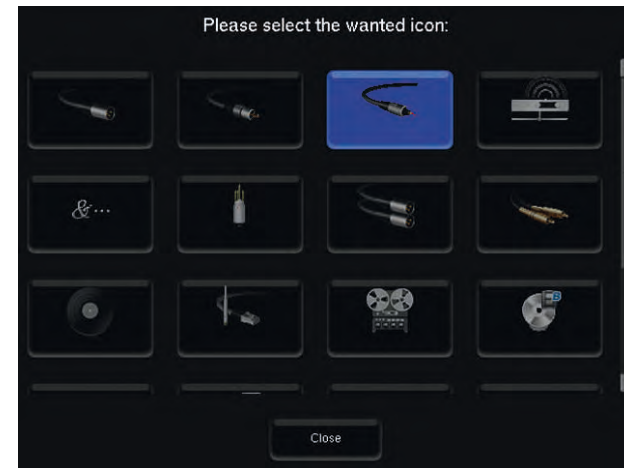

Unused sources can be hidden from the *Home* with the **Enabled** button:

- Black button : the source won't be displayed on the *Home* screen.
- Blue lighted button : the source will be displayed on the *Home* screen.



Simultaneously the source name is applied on the front screen..

7.4 PRESETS MANAGEMENT

Except the sources configuration and power-on default settings, all parameters are saved into presets. The Amethyst can store up to 29 user presets.

Home Page - Presets list



The presets list is available from the *Home* page. After first start-up, the only preset available in the unit is the built-in preset. This *Presets* menu is only used to select and load presets. Presets management is handled from a dedicated *Presets* menu available through the *Settings* panel.




IMPORTANT

Any parameter change will be lost if not saved in a preset. Please manipulate presets with care since saving, overwriting and deleting preset do not require confirmation.

Settings Panel



Presets 1-9 page

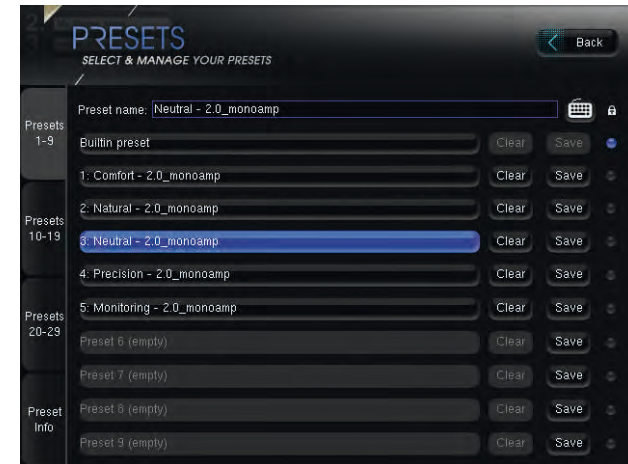


The Presets page consists of four vertical tabs, on the left side of the screen:

- **Presets 1-9:** includes the Built-in preset and presets 1 to 9;

NOTE

The Built-in preset is locked and cannot be overwritten.

- **Presets 10-19:** presets 10 to 19;
- **Presets 20-29:** presets 20 to 29;
- **Preset Info.:** shows the current preset informations.

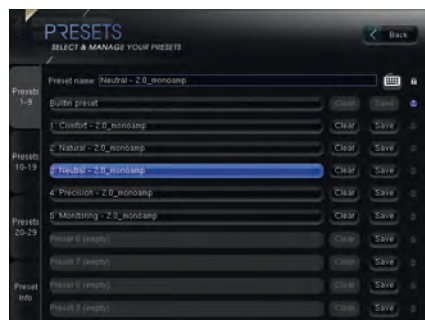

Each Preset tab consist of the following items:

- The **Preset name** field: used to enter or modify a preset's name.
- 10 memory slots including from left to right:
 - The **Preset name/number**, greyed when the slot is empty, highlighted in blue when the preset is selected.
 - A **Clear** button to clear the memory slot. This function irreversibly deletes the preset's parameters.
 - A **Save** button to save current parameters as a preset in the memory slot.
 - A **Lock** checkbox to protect the preset: disables the **Clear & Save** buttons.

As an example, the recommended procedure to duplicate a preset and copy it in a different memory slot would be to:

1. Reload the preset to recall the exact configuration you want to duplicate.
2. Use the **Save** button of an empty preset to recopy it.

ABOUT THE "SETUP WIZARD"

The setup Wizard always uses a bank of 5 presets. You may therefore have to move your presets before starting a new calibration via the wizard.



NOTE

A specific preset can be linked to each source. Please refer to chapter 7.2. Presets can be backed-up and restored to/from a USB key. Please refer to chapter 7.5.

7.5 POWER-ON DEFAULT SETTINGS



In the **Power-on Default** menu you can setup which source and which preset to be loaded at startup.

The setup is straightforward :

1. **Choosing the default preset :** Change the preset in the **Power-on Optimizer Preset** frame with the < > arrows button
2. **Choosing the default source :** Select the Source in the **Power-on Source** frame by clicking on its name. It will then be highlighted in blue. The **Use Last Selected Source** allows to restart on the same source the Amethyst was on at the last power off.
3. Once your setting is over change click on the **Back** button to apply the changes.

7.6

USB BACKUP/RESTORE OF THE PRESETS ON USB DONGLE




At least 4 USB ports
are available at the back side

Here are the functionalities available thanks to the USB backup/restore:

- Load or save presets to a USB key.
- Save or load profiles (= sources configuration) to a USB key.
- Save or load XML parameters to a USB key.
These parameters are meant to be modified by installers only.
- Save or load the microphone calibration files to a USB key.
- Generate and save a PDF report for each of your presets on a USB key. This report includes the summary of your system measurements and of the correction applied in consequence.
- Save a bug report to a USB key: when an unexpected error occurred the system is halted to prevent damage to your system and a bug report is generated. After the restart of the Amethyst you can save that bug report on the USB key and then send it to Trinnov for analysis.
- Save screenshots to a USB key: using a keyboard you can take screenshots of the Amethyst Graphical User Interface by pressing the "print screen" key. These screenshots can be copied through the USB Key interface afterwards.

Modal dialog window displayed when a USB dongle is detected

When you plug a USB dongle in one of the Amethyst USB connector, a modal window will automatically be opened, offering you all related functionalities:

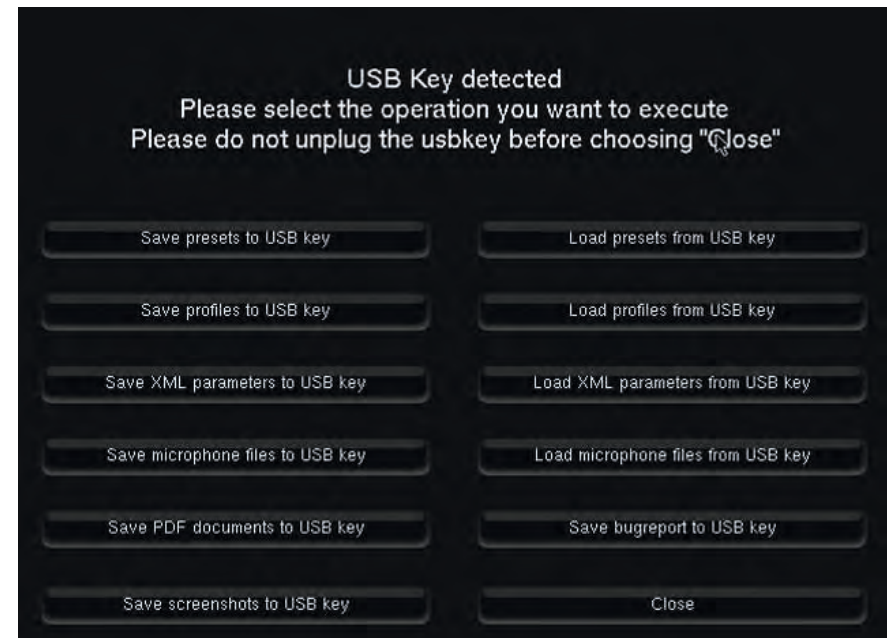

IMPORTANT NOTES

When pulling out your USB dongle from the Amethyst while ensuring its data integrity, please first close the modal dialog window (Close button) and wait until the home page is displayed before unplugging it.

Please be careful when you load your presets from USB dongle: if a slot of the Amethyst is already filled with another preset on the USB dongle, this USB preset will overwrite the processor preset. In order to prevent all incidental overwriting, you can lock the presets you want to protect.

7.7 CHANNELS SETTINGS

Channels menu, available through the *Channels* button on the Home page give you access to fine-tuning tools. Meters are also available for every Inputs and Outputs.

Inputs

You can launch a test noise for each configured channel, for example check if your connections are correctly done and assigned.


Outputs

For each channel, you can apply a graphical EQ (Equalizer) which can easily be saved, loaded edited or deleted.



If your preset includes more than two channels, you can browse through channels by pressing the right (>) and left (<) arrows.


To create an EQ, press the *Edit* button on the *User EQ* bar, a new window *User EQ Edition* will open:

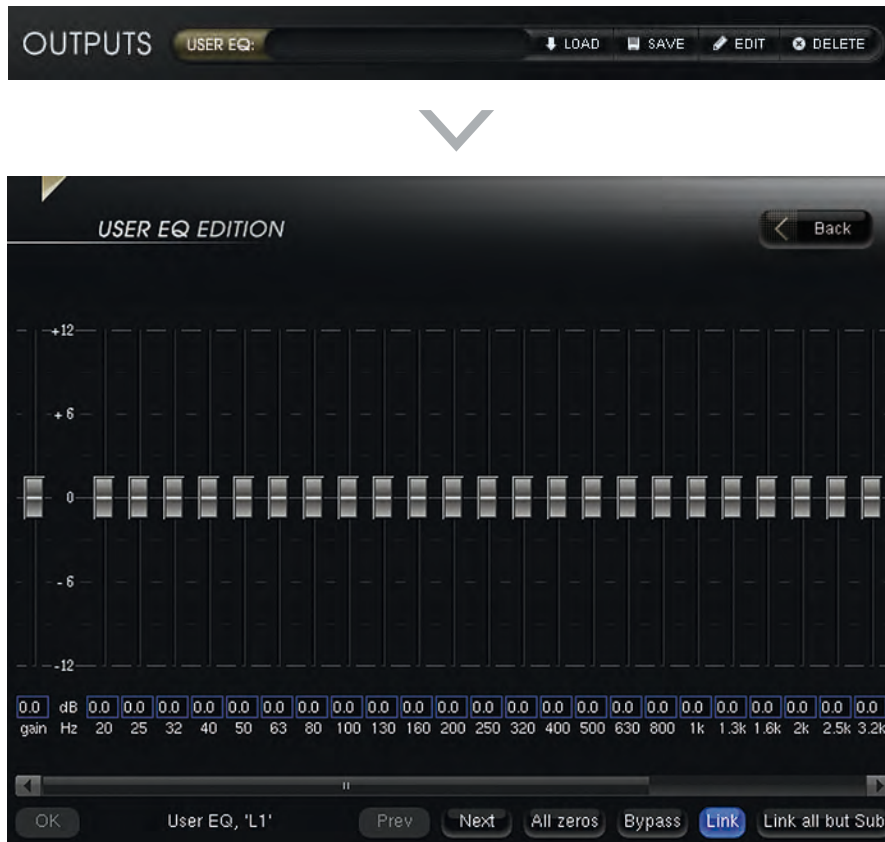

This is a standard 31 bands EQ. Press the *Link* button on each channel on which you want your settings to be applied. You can raise and lower gains with sliders within a +12/-12 dB scale. The gain will be reported in the small frame with a blue border under the corresponding slider. If you modify a frequency gain value, it will be highlighted in red. You can also click in the blue bordered gain's frame and directly input the gain's value with a keyboard. A master level gain for the current channel is also available on the left.



- ① Master Gain slider
- ② dB Scale
- ③ Gain per frequency sliders
- ④ Direct Input Gain values for each frequency
- ⑤ Frequencies

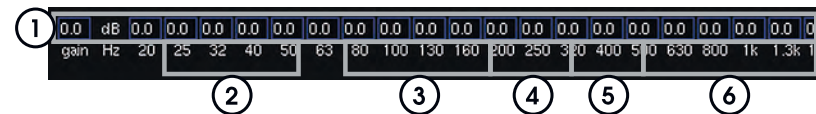

- ① Scrollbar
- ② EQ and Channel name
- ③ Change Channels button
- ④ Reset all values to 0
- ⑤ Bypass EQ
- ⑥ Link Channels or link all Channels except subwoofers

Once in the **Channels** page you can save your current EQ by pressing **Save**; from this point two choices are offered to you:

- You already have a user EQ saved and want to overwrite it with your new EQ: just click on the name of the EQ to overwrite.
- You want to create a new entry for your EQ: click **Create New**, the virtual keyboard will be displayed in order to let you name your EQ. When finish press **Enter** to confirm and save your EQ, press **Esc** otherwise.

1 LOAD AN EQ

To load an EQ, click on **Load** button and then on the name of your desired EQ. If you want to disable the User EQ select **(NONE)**. When no user EQ is set or when it is set to **(NONE)** the field where the name is normally displayed is empty.

2 SAVE button.

3 EDIT AN EQ

To edit an existing EQ, you first have to load it (see previous chapter) and then click on the **Edit** button. If you click on **Edit** without having selected an EQ first you will create a new EQ.

4 DELETE AN EQ

To delete an EQ, you have to first load it with the **Load** button, then you have to click **Delete**. A confirmation will be asked before effectively deleting the EQ as it is not possible to undelete an EQ.

5 CREATE A NEW USER EQ entry.

6 OVERWRITE an existing EQ.



For each Output channel you can:

- 7 **MUTE** it with the *Mute* button
- 8 **INVERSE THE POLARITY** with the polarity trigger (the polarity is inverted when the trigger is lighted up)
- 9 **ADJUST THE LEVEL** by +/-0.5dB step
- 10 **ADJUST THE DELAY** by +/-0.5ms. You can not input a negative delay.






16 dB
14 dB
12 dB
10 dB
8 dB
6 dB
4 dB
2 dB
0 dB

20 Hz

1000 Hz

20 kHz

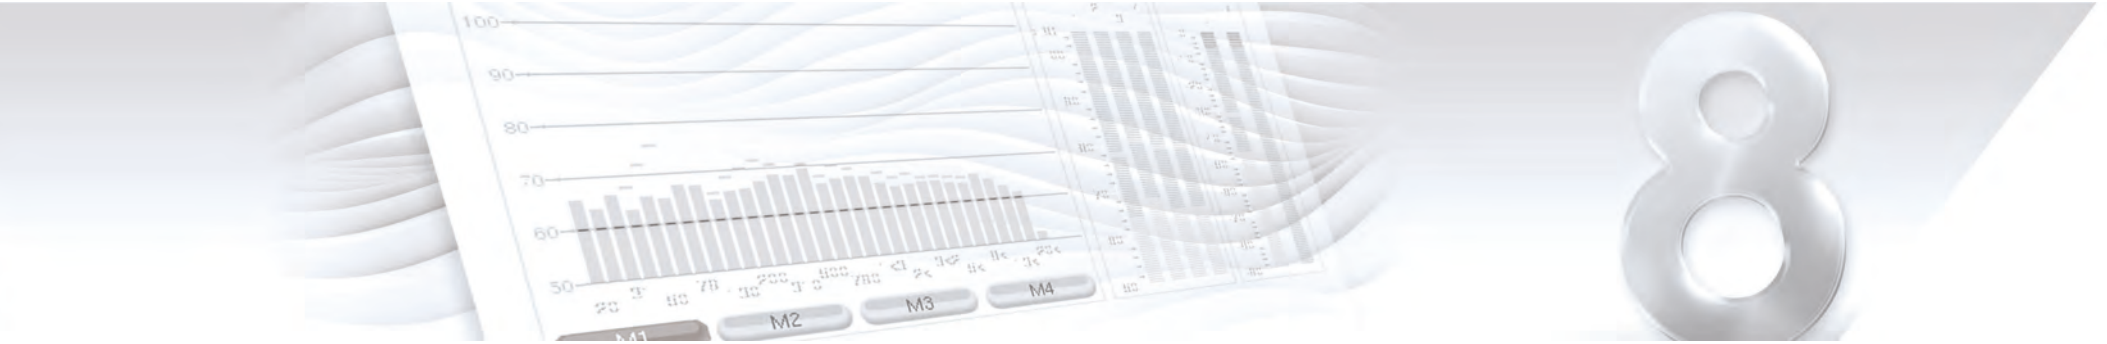

BASIC OPTIMIZER SETUP

	8.1	OVERVIEW	71
8.2		PRESETS SELECTION & OUTPUT CONNECTIONS	72
	8.3	MICROPHONE SETUP	74
8.4		CALIBRATION LEVEL ADJUSTMENT	76
	8.5	CROSS-OVER CALIBRATION	77
	8.6	SPEAKER CALIBRATION	81
	8.7	AUTOMATIC PRESETS	84


This chapter will help you setting up your system by:

1. Using the Setup Wizard, the step-by-step guide to the unique Trinnov acoustic correction.
2. If you want to go further, you can follow an iterative procedure and modify the main acoustic parameters to efficiently converge to the best results.
3. Manage your presets.

8.1 OVERVIEW

The Amethyst includes a step-by-step calibration assistant to help you throughout the calibration process and benefit from the Room/Speaker correction technology Trinnov Optimizer with just a few clicks.

Wizard's steps quick reference :

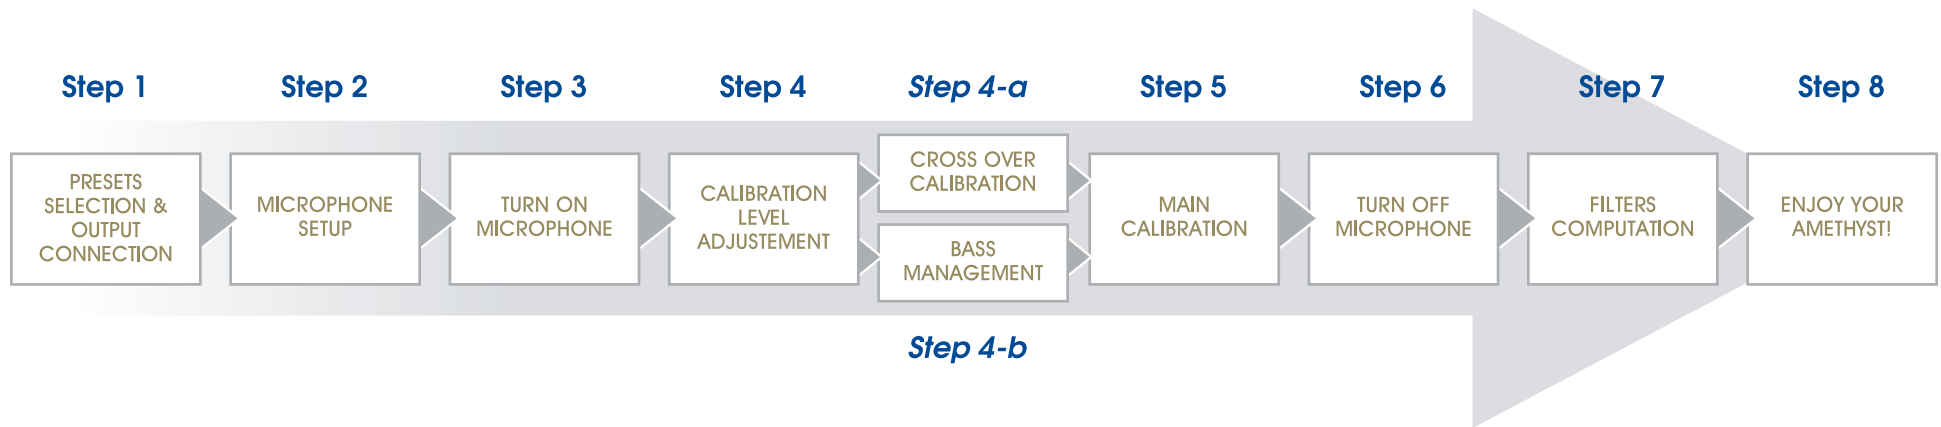

8.2 PRESETS SELECTION & OUTPUT CONNECTIONS

Step 1 - PRESETS SELECTION & OUTPUT CONNECTIONS

You have 2 choices to make in the wizard's first step:

1. **First, you have to select a preset range** where the filters issued from calibration will be saved. The Amethyst automatically computes 5 presets at the end of the calibration process, so a slot of 5 presets is required to achieve the wizard.

IMPORTANT NOTE

If you select presets where configurations already exist, they will be erased as soon as you click **Next step**. There is no possible fallback, so please ensure you have saved the presets you want to keep on other slots or on a usb key before proceeding further with the wizard.




2. Then, you have to select your speaker layout:

- **2.0 Mono-amp:** standard stereophonic configuration. You have two main speakers to reproduce all the audible spectrum. Each speaker receive one audio amplification channel.
- **2.0 Active Bi-amp:** specific configuration where the cross-over between channels (intended to separate high frequencies from low frequencies) of your loudspeaker is done directly by the Amethyst and not by the internal speaker crossover. There are 4 channels on total, each required a dedicated amplifier.

IMPORTANT NOTE

Active Bi-amp is different from passive Bi-amp or Bi-wiring. Please contact your speakers manufacturer if you have a doubt on your speaker's capacity to handle active bi-amping.

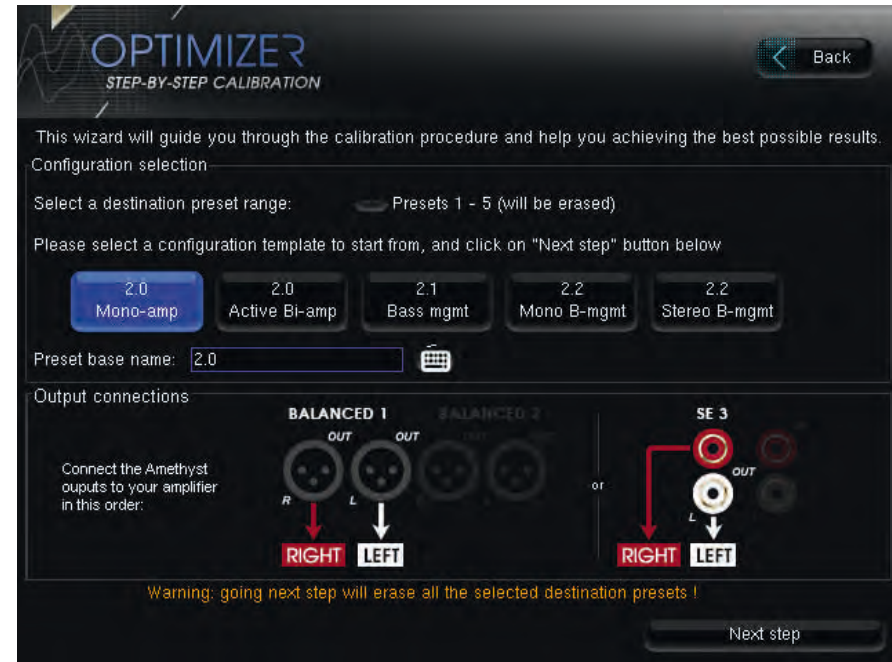

- **2.1 Bass Management:** in this mode, the lowest frequencies from both main speakers are sent to a subwoofer.
- **2.2 Mono Bass Management:** same as 2.1, but two independant subwoofers receives the bass management signal.
- **2.2 Stereo Bass Management:** unlike 2.2 (Mono Bass Management), the signals sent to the subwoofers are different since the left subwoofer receives the low frequencies from the left channel and the right subwoofer the low frequencies from the right channel.

For each configuration, a connexion diagram will be displayed in the Output connections frame. Follow these instructions to connect the Amethyst to your amplifier(s) via balanced or single ended output.

3. Choose how to prefix preset names using the Prest base name field.

Once your configuration is over, click **Next Step**. Note that this action will overwrite the presets you have selected. If you need to check the availability of these memory slots, you can quit the wizard at this step by pressing the **Back** button.

CONNECTIONS TEMPLATES TO FOLLOW AT THE BEGINNING OF THE CALIBRATION PROCESS


NOTE Balanced outputs and single-ended outputs work simultaneously.

TEMPLATES	BALANCED ANALOG OUTPUTS	SINGLE-ENDED ANALOG OUTPUTS
<p>2.0 MONO-AMP</p>		
<p>2.0 BI-AMP</p>		
<p>2.1 BASS MGMT</p>		
<p>2.2 MONO B-MGMT 2.2 STEREO B-MGMT</p>		

Step 2 - MICROPHONE SETUP

The most critical step of the Optimization procedure is the measurement (or calibration), which first relies on a correct microphone placement.

1. During the calibration procedure, the microphone should be screwed on a microphone or camera stand.
2. The **red LED**/battery level shows the front of the microphone. This end **must be pointed to the front** of the sound stage, typically to the center of the speakers.
3. Place the **microphone at the listening position** using your ears as height reference for the top capsule of the microphone, as shown in the following figure.
4. Make sure there is **no obstacle** between the speaker and the microphone.
5. Make sure there is **no highly acoustically reflecting surface** (leather sofa, glass table, back wall...) close to the microphone, or cover it with a thick blanket.

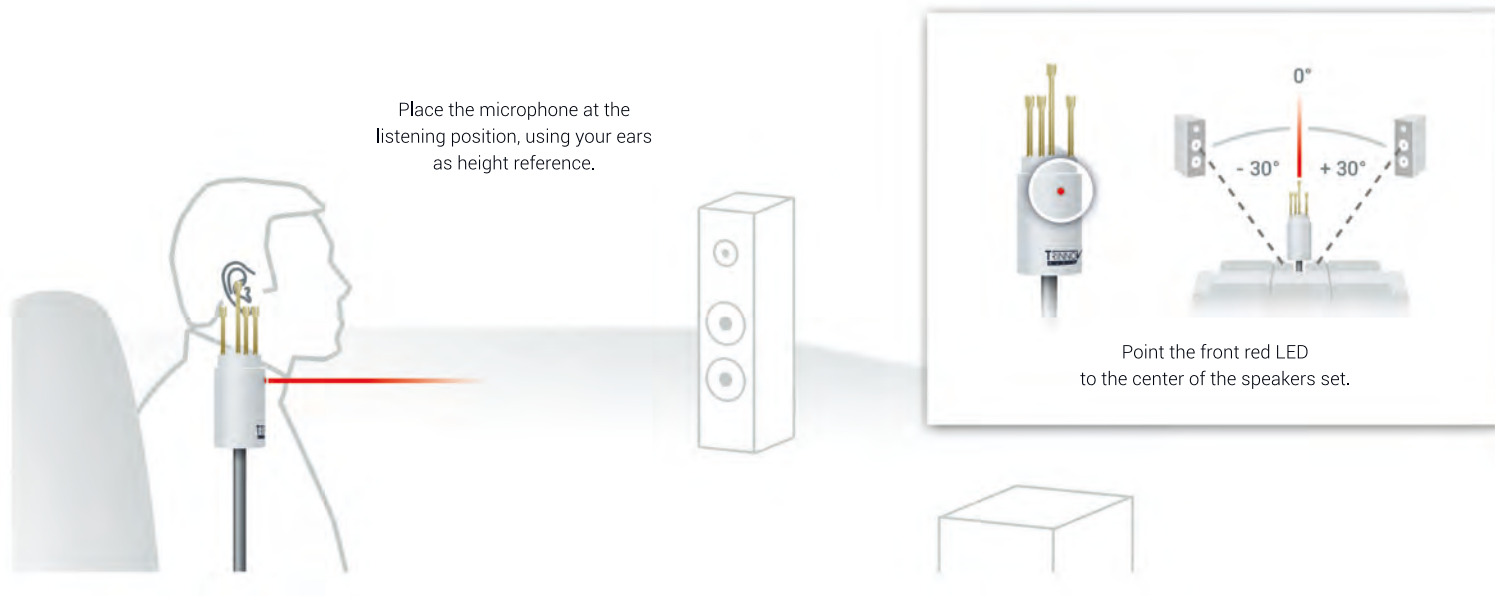


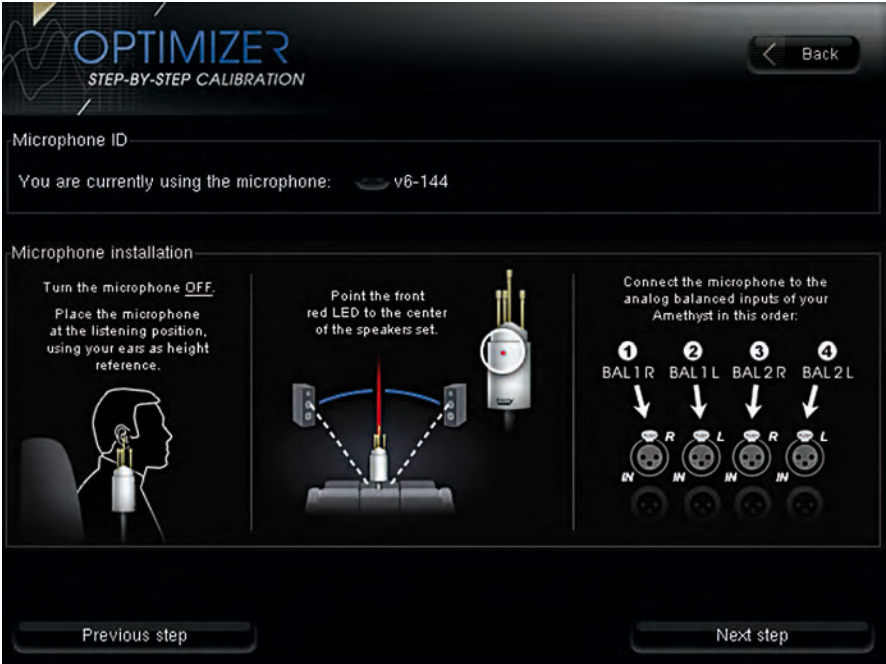
In this very straightforward step, you just have to choose the model number (ie ID) of your microphone from a dropdown menu. This microphone ID can be found directly at the back of your microphone. If by error your microphone is not referenced in the list, please contact your vendor for an update.

The frame **Microphone installation** is describing precisely how to determine your microphone position from your listening and speakers position. Follow that guide to ensure optimal measurements and results.

The last diagram shows you how to connect the microphone to the ST2 HiFi. As it uses all XLR inputs, you may have to disconnect your sources to do the measurement. Once the Wizard is over and your microphone switched off as instructed, you can safely plug back your sources.

When your microphone setup is done, press **Next step**. Pressing **Previous Step** will lead you to the first wizard step, and **Back** to the Amethyst's setting panel.

 **NOTE** Pressing **Back** at this point, and in the following steps, won't restore your presets as they were before entering the wizard: they have been overwritten in step 1.



Step 3 - TURN ON THE MICROPHONE

Depending on the model of your microphone, a red light on the front should light up when it's turned on. From this moment, you can press **Next Step** to continue. If you decide to go to the previous step or quit the wizard via the **Back** button, don't forget to switch the microphone off.



8.4 CALIBRATION LEVEL ADJUSTMENT

Step 4 - CALIBRATION LEVEL ADJUSTMENT

In this step, you will adjust the output level of your speakers to the minimum required level for calibration. To avoid excessive level output, the output is automatically set to -40dB .

Press **Start** in the Calibration level adjustment frame to launch a pink noise. If everything is set up properly, you should see the meters (bargraph) moving in the **Micro** and **Out** frames.

The **Micro** frame represents the level received by the four capsules, and the **Out** frame, the level on the output of the Amethyst.

The **Microphone RTA** frame, where RTA stands for Real Time Analysis, gives you a real time visualisation of the frequency response of your system seen by the microphone.

At last, the **Micro level** frame indicates the current level of the microphone as a Sound Level Meter would. The volume is given in dBC.

In the **Calibration level adjustment** frame, the Start button is used to start and stop the pink noise. The **Auto** button will automatically switch to the next speaker every 5 seconds.


You can use the second row's arrows (< >) to manually switch speakers.

The last row of buttons (< >) is only used with the active bi-amplification template and allows to check independently the level of the low/high frequencies, or both at the same time.

Here is a little guideline for the level adjustment:

1. Press **Start** to launch the pink noise
2. Check if a signal is played in the **Out** frame and check that a pink noise is played by the first speaker. If not, verify the speakers connections and make sure you have pressed **Start**.
3. Check if a signal is received by the microphone in the **Micro** frame. If not, check that your microphone is correctly plugged in and that it is switched on (see previous chapter on step 2).
4. Adjust the **Master Level** with the plus (+) and minus (-) buttons until the **Micro level** is displayed in green. If the **Micro level** is displayed in blue, the level is too low; press the plus (+) button to raise it. If the level is displayed in red, the level is too high; press the minus (-) button to lower the level until the level is displayed in green.
5. Repeat the operation for every speaker by pressing the > button in the **Calibration level adjustment** frame.

When all the lights are green, press **Next Step** to continue...

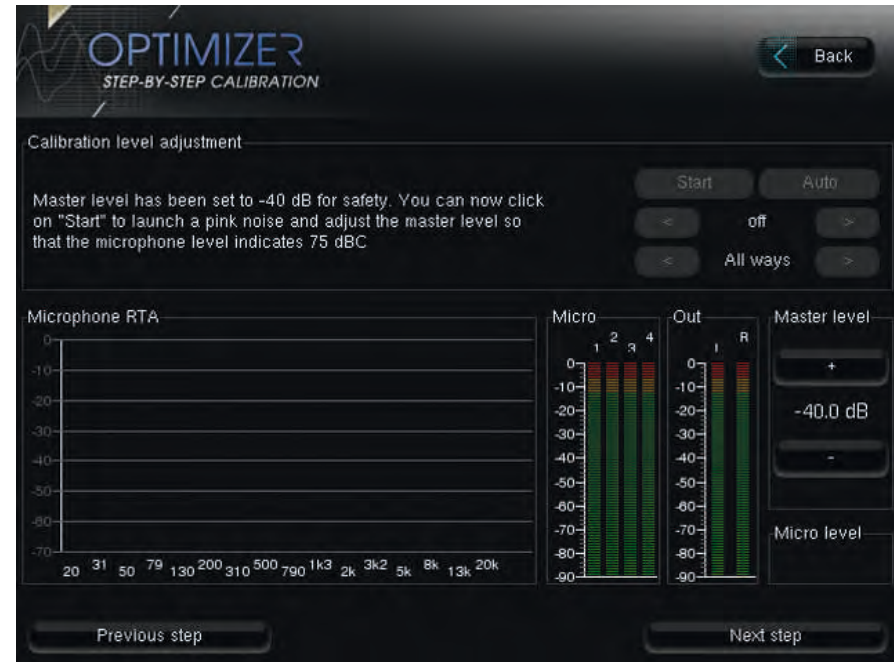

NOTE

For the subwoofers, you may have to use their own level settings to align them to your main speaker level.

8.5 CROSSOVER CALIBRATION

Step 4-a - SEMI-AUTOMATIC CROSSOVERS CALIBRATION

The Step 4 displays different settings depending on the selected template:


- The Cross-overs calibration is only available with the 2.0 Bi-amp template.
- The Bass management crossover frequency is only available with the 2.1 and 2.2 templates.

The calibration of bi-amplified speakers is a two-steps procedure:

- Semi-automatic crossovers calibration.
- Main calibration

The active crossovers are implemented as follows:

1. The type of filters and crossover frequencies are set manually.
2. Levels, Delays and polarity of each driver are determined automatically by calibrating separately each speaker.

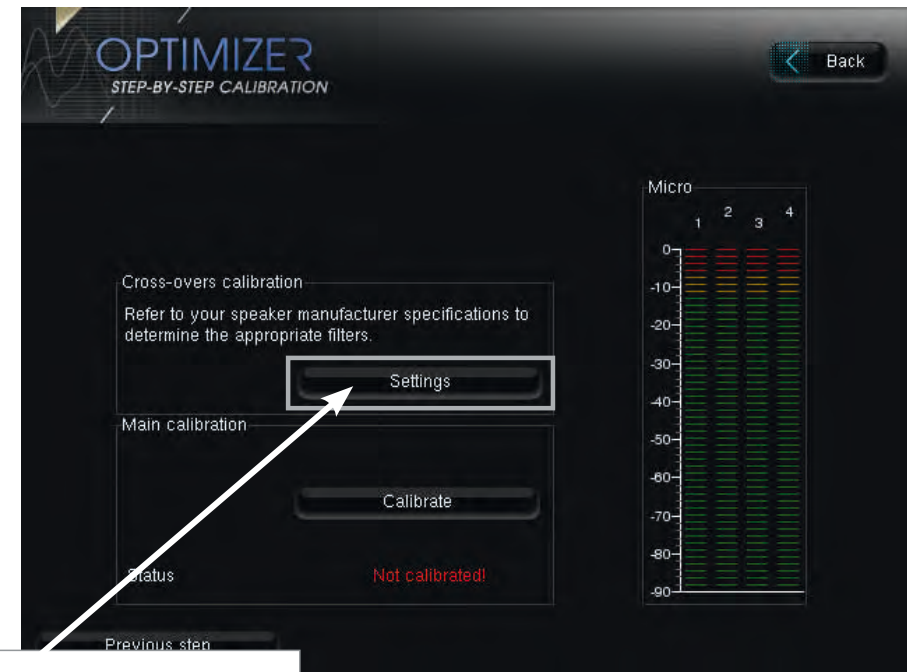

Click the **Settings** button in the **Cross-overs calibration** section to display the cross-overs settings and calibration page.

Cross-overs settings page



This page displays the left (shown by default) and right speakers cross-overs settings as horizontal tabs.

The left and right speakers are linked by default (the link button is blue highlighted in both tabs). Every manual change is therefore applied on both speakers.

Please refer to your speaker's manufacturer specifications to determine the appropriate filters:

- Low / High cross-over frequencies (default 2000 Hz)
- Filter type (default 4th order Linkwitz-Riley). The following filters are available:
 - 2nd and 4th order Linkwitz-Riley
 - 2nd, 3rd and 4th order Bessel
 - 2nd, 3rd and 4th order Butterworth
- Select the type of high-pass or/and low-pass filters with the "<" and ">" buttons.
- The cut-off frequency of each filter is set by sliding the scrollbar or by using the arrows.
- Two additional filters are available under the name of **Constant-directivity horn EQ**.


The purpose of such filters is to boost the high frequencies for speaker that use constant-directivity horns.

These speakers tend to let the high frequency fall down at the sweet spot. Depending on the horn you are using, you may want to boost the high frequencies by 3 or 6db/oct, from about 3 kHz.

The **Apply** button is highlighted as soon as a parameter is modified and is used to compute and load the new settings. Once compute is finished, filters are applied to the outputs.

If change is unwanted, press the **Cancel** button.


"Constant-directivity horn" EQ filters

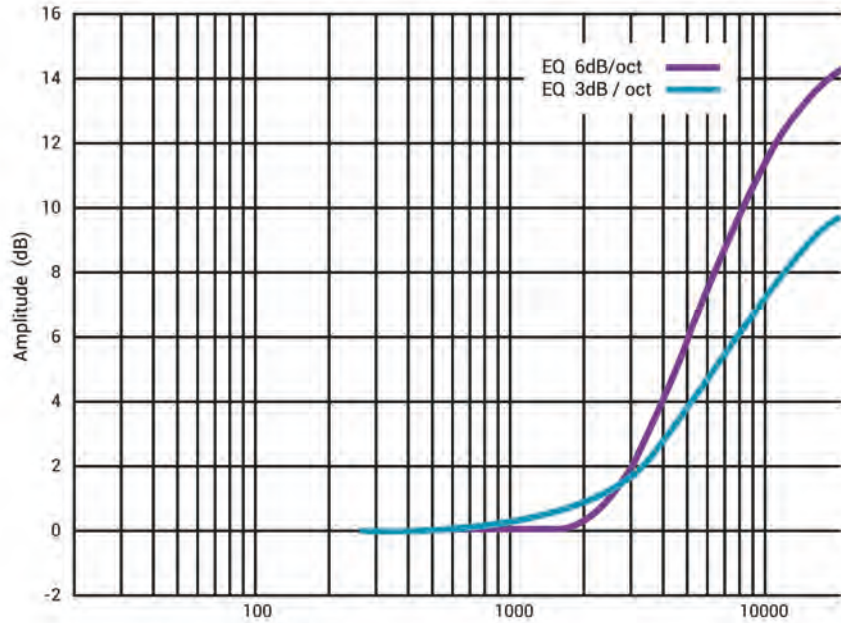

NOTE

The calibration of multi-way speakers usually requires high output level.

Crossover filters representation

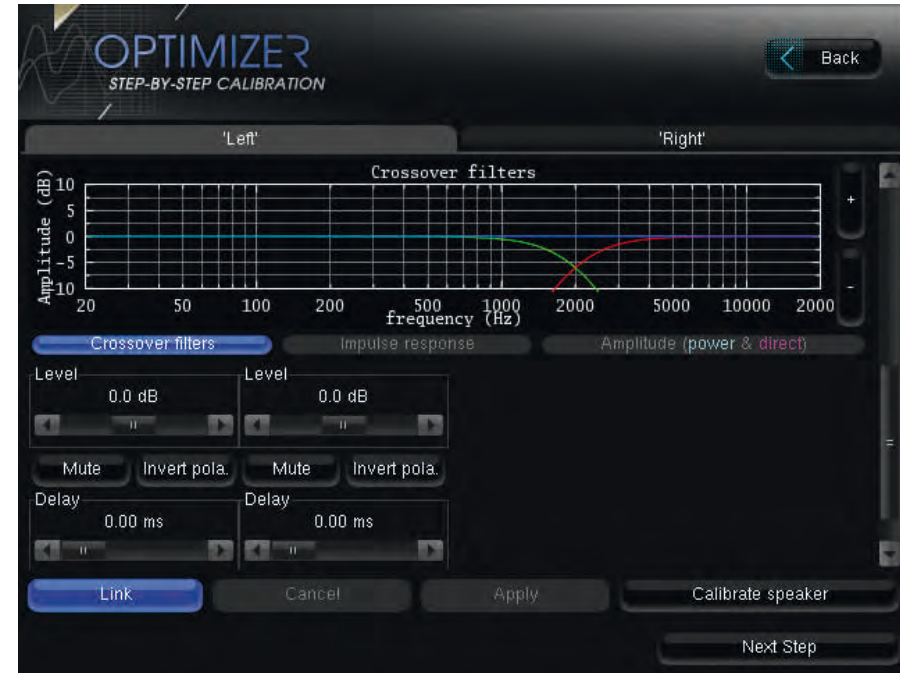


Scroll down to display the crossover filter representation.

- The green curve represents the theoretical low-pass filter response.
- The red curve represents the theoretical high-pass filter response.
- The blue curve represents the theoretical resulting response of the speaker.

Press the *Calibrate speaker* button to automatically determine levels, polarities and delays of the selected speaker and follow onscreen instructions. A test signal (MLS) is sent to each driver.


The following graphical representations are available after calibration.

Crossovers Impulse response after calibration

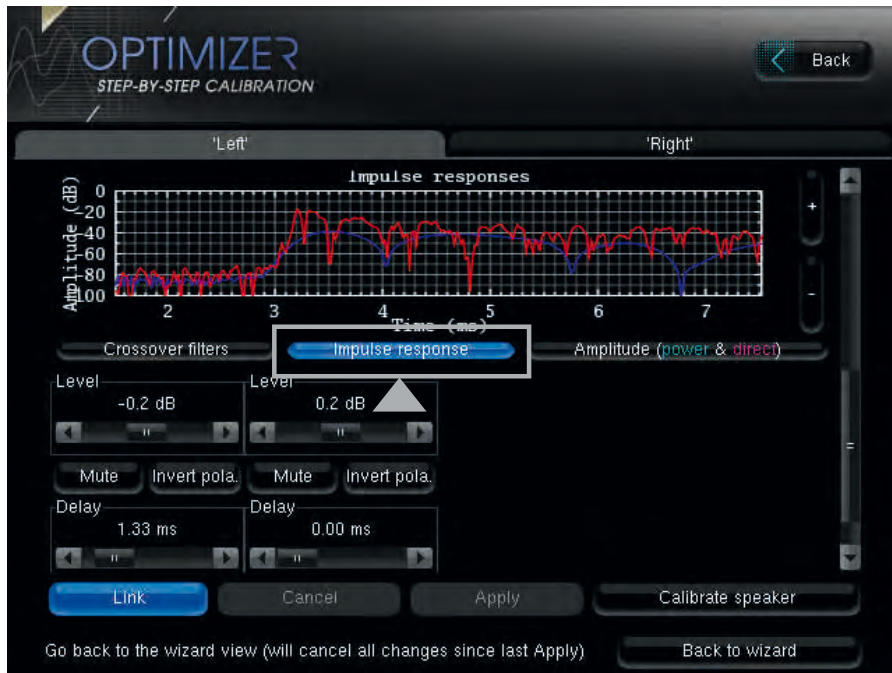

The *Impulse response* graph shows the measured impulse response of each driver and allow to check whether they are correctly synchronized or not.

Amplitude (power & direct) response after calibration

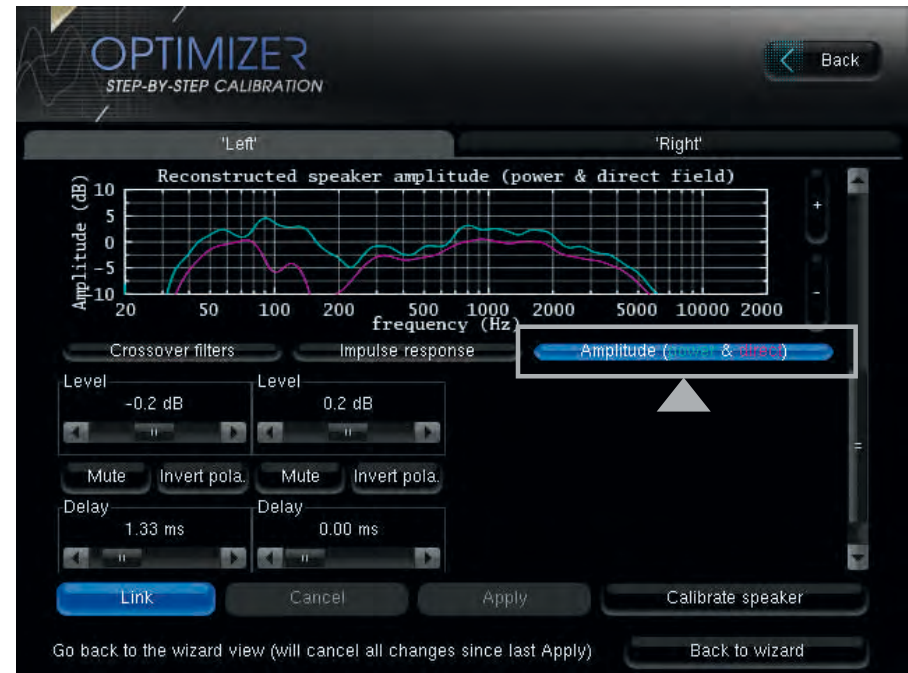

The *Amplitude (power & direct)* graph shows the recombined amplitude response of the speaker. You can see whether the combination of the drivers is consistent, and you can observe the effects of level/delay/polarity modification on the combined amplitude of the speaker.

Two curves are displayed, one showing the global power of the speaker (including the room), and one showing the amplitude of the direct front and early reflections.

Comparing both curves will indicate you whether the crossover conserves the directivity of the speaker: the more alike the two curves look, the more directive the speaker is towards the listening spot.

You can then select the *Right* speaker tab to calibrate the other speaker. Then press the *Back to wizard* button to go back to the main calibration page.

8.6 SPEAKER CALIBRATION

Step 4-b - BASS MANAGEMENT SETUP

The Bass management crossover frequency window is displayed with 2.1 and 2.2 Bass management templates.


Low frequencies below the bass management crossover frequency will be filtered and sent to the subwoofer(s).

Press the **-10/+10** and **-1/+1** buttons to respectively decrease or increase the crossover frequency by 10 and 1 dB.




IMPORTANT

The Bass management is not taken into account during calibration. It can therefore be changed at any time.

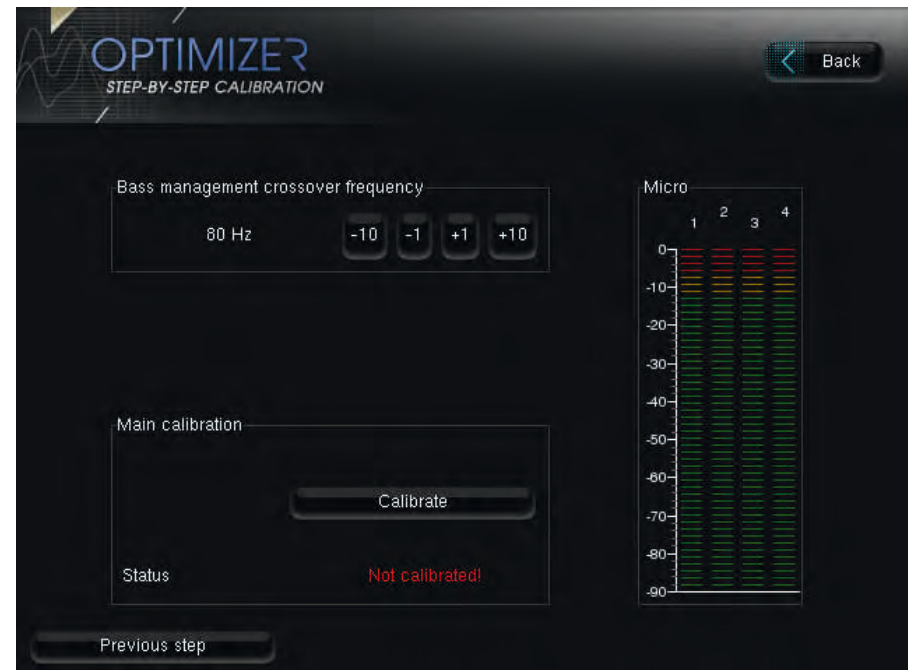

Step 5 - MAIN CALIBRATION

If you are coming from step 4-A after the cross-over calibration, press the **Calibrate** button in the **Main Calibration** frame to launch the speaker calibration sequence.

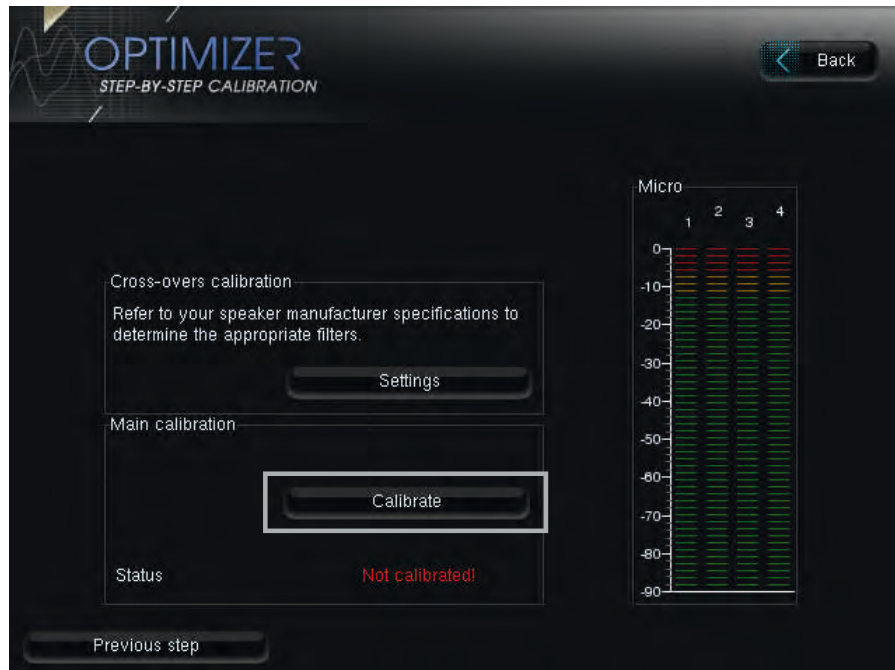

If you are coming from step 4-B after having setup your bass management cross-over frequency press the **Calibrate** button in the **Main Calibration** frame to launch the speaker calibration sequence.



Pressing the **Calibrate** button initiates a series of 3 MLS (Maximum Length Sequence, Calibration signal) minimum, that will be played and measured on each speaker (subwoofers included). The **Status** label will display information on the current speaker being calibrated. The **Micro** frame indicates the microphone input levels during calibration. If a problem occurs, a warning message will be displayed in orange under the **Status** label.

Warning messages can occur:


Crest factor too low for capsules...:

Check that your microphone is switched on and that your level meets the calibration requirements.

Unable to determine position... or Unstable position...:

Check that nothing stands in the acoustic path between the speaker and the microphone. If it is not sufficient, try to calibrate at a higher level or change the microphone's position by a few centimeters.

If you are coming from step 4 press directly the **Calibrate** button in the **Main Calibration** frame to launch the speaker calibration sequence.

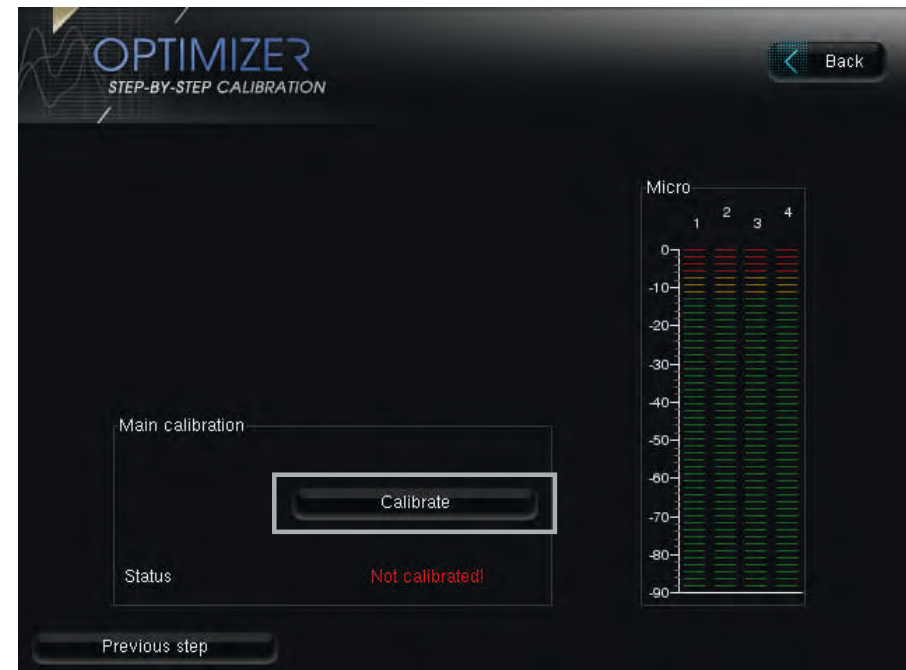

8.7 AUTOMATIC PRESETS

Step 6 - TURN OFF MICROPHONE

Turn off the microphone; the front light of the microphone will fade off. Press the *Next Step* button to continue.



Step 7 - FILTERS COMPUTATION

The Amethyst is now computing 5 filters saved in 5 presets. The computation can take 2 to 5 minutes. A progress bar indicates remaining computation time.

The 5 presets tend to cover a large spectrum of listening types; here is a short description for each of them:

COMFORT	NATURAL	NEUTRAL	PRECISION	MONITORING
You like the idea of having a system which sticks to the truth, but sometimes a little more roundness on harsh CD, a more tolerant listening on those badly mixed but lovely materials is needed.	You like the sound of your speakers, you want to correct the phase, the reflections etc. but you don't want to lose the sound signature of your speakers.	Could be considered as a default setting, it is designed to offer a flat response from bottom to high: listen to the music, not to your system.	Is it the second or the third violin who missed that note ? If you are eager to know, switch to the Precision preset.	Audio, sound and music are your work on a daily basis. You want and need to hear everything, including that irritable little defect in the recording that every one else would try to mask. The monitoring preset is a magnifying glass for your records.

When the computation is over, the system will automatically go to the final step.

Step 8 - ENJOY YOUR AMETHYST!

Congratulations the Wizard is over! You can now press the button *Enjoy your Amethyst* and compare the five presets described in the previous page.

Note that your system is muted for a security matter, so it is the good time to unplug your microphone and maybe plug your favorite source.



The presets are directly available in the home page via the *Presets* button.

You can also fine-tune automatic settings via the *Channels* page (see *chapter 7.7*) or dive into the *Advanced parameters* (via the *Settings* page).



OPTIMIZER

IMPULSE RESPONSE

IIR FILTERS

GRAPHS

TARGET CURVE

AMPLITUDE


ACCORDING TO L&R

EARLY REFLECTIONS

PHASE

ENERGY RESPONSE

DELAY

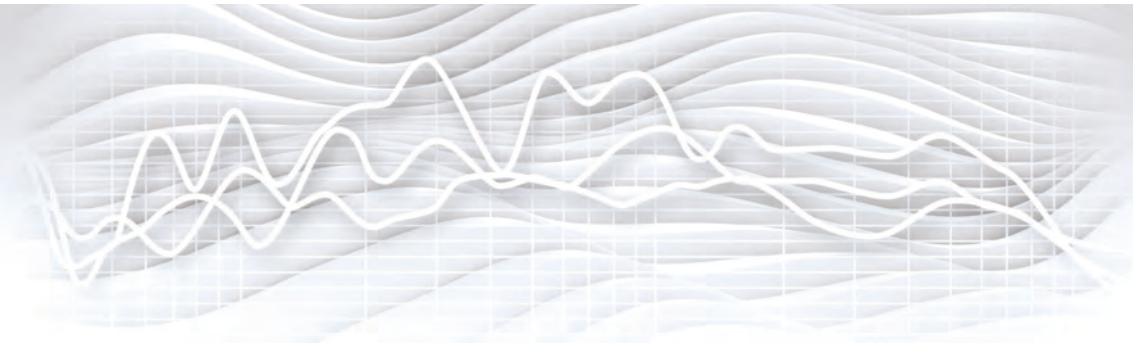

ADVANCED OPTIMIZER SETUP

9.1	TRINNOV CERTIFIED INSTALLERS	88
9.2	ITERATIVE PROCEDURE	89
9.3	ARBORESCENCE OF THE GUI MENU	89
9.4	OPTIMIZER GRAPHS	91
9.5	OPTIMIZER MODES	93
9.6	OPTIMIZER SETTINGS	97
9.7	TARGET CURVE / LIMITER CURVES	99
9.8	ABOUT LATENCY	102

9.1 TRINNOV CERTIFIED INSTALLERS

Depending on how far you want to dig into its features, the Optimizer is either a straightforward and easy-to-use automatic compensation system or an incredibly flexible and powerful tool, including numerous advanced filter parameters, target curves and manual EQ's, all being recomputable on the fly.

By following an iterative installation procedure, the Optimizer achieves results beyond expectations in record time but requires a good understanding of the audio and acoustic basics and more especially experience to clearly identify a problem and therefore use a relevant method to solve it. That's why we recommend at least to consider certified installers services.

The Amethyst provides multiple tools to adjust the presets automatically generated by the Wizard. For a fresh start, load the preset you want to adjust and follow the iterative procedure (see *chapter 9.3*).

9.2 ARBORESCENCE OF THE GUI MENUS

Manual settings



Automatically configured with Setup Wizard Templates



Optimizer Settings	Optimizer Graphs	Processor	Setup
<p>RUNTIME Enable/Disable automatic correction</p> <hr/> <p>SETTINGS Configure optimization</p> <hr/> <p>POSITIONS Check speakers position</p> <hr/> <p>CALIBRATION Manage & perform calibration</p>	<p>GRAPHS Analyze your system's performance with and without Optimizer</p> <ul style="list-style-type: none"> • Amplitude • Phase • Impulse response • Group delay 	<p>METERS Check Inputs & Outputs levels</p> <hr/> <p>MASTER Configure Master level display and Master delay</p> <hr/> <p>INPUTS</p> <ul style="list-style-type: none"> • Inputs gain • EQ • Noise generator • Solo / Mutes 	<p>OUTPUTS</p> <ul style="list-style-type: none"> • Outputs gain • Fir EQ / EQ • Solo / Mutes <hr/> <p>OUTPUT DELAY Set individual delays on your outputs</p>
			<p>SOURCES Set Inputs format</p> <hr/> <p>SPEAKERS Set number of speakers</p> <hr/> <p>ACTIVE XOVER Configure active crossovers</p> <hr/> <p>CLOCK Set clock mode and sources</p>
			<p>SOURCES ROUTING Route your Inputs</p> <hr/> <p>SPEAKERS ROUTING Route your Outputs</p> <hr/> <p>NETWORK Network settings</p> <hr/> <p>SYSTEM STATUS System settings</p>

9.3

ITERATIVE PROCEDURE


Whether it is using the Optimizer Settings of the Setup Wizard, the Target Curve or other parameters described in this chapter, the method to converge to the best results efficiently remains the same.

1. Establish a correlation between the Optimizer graphs and the listening experience.
2. Adjust acoustic parameters.
3. Compute the filters.

The main and most efficient parameters are available in the *Advanced settings*:

- Optimize Modes
- Maximum Boost/Attenuation
- Target Curve
- Limiter curve


The iterative procedure

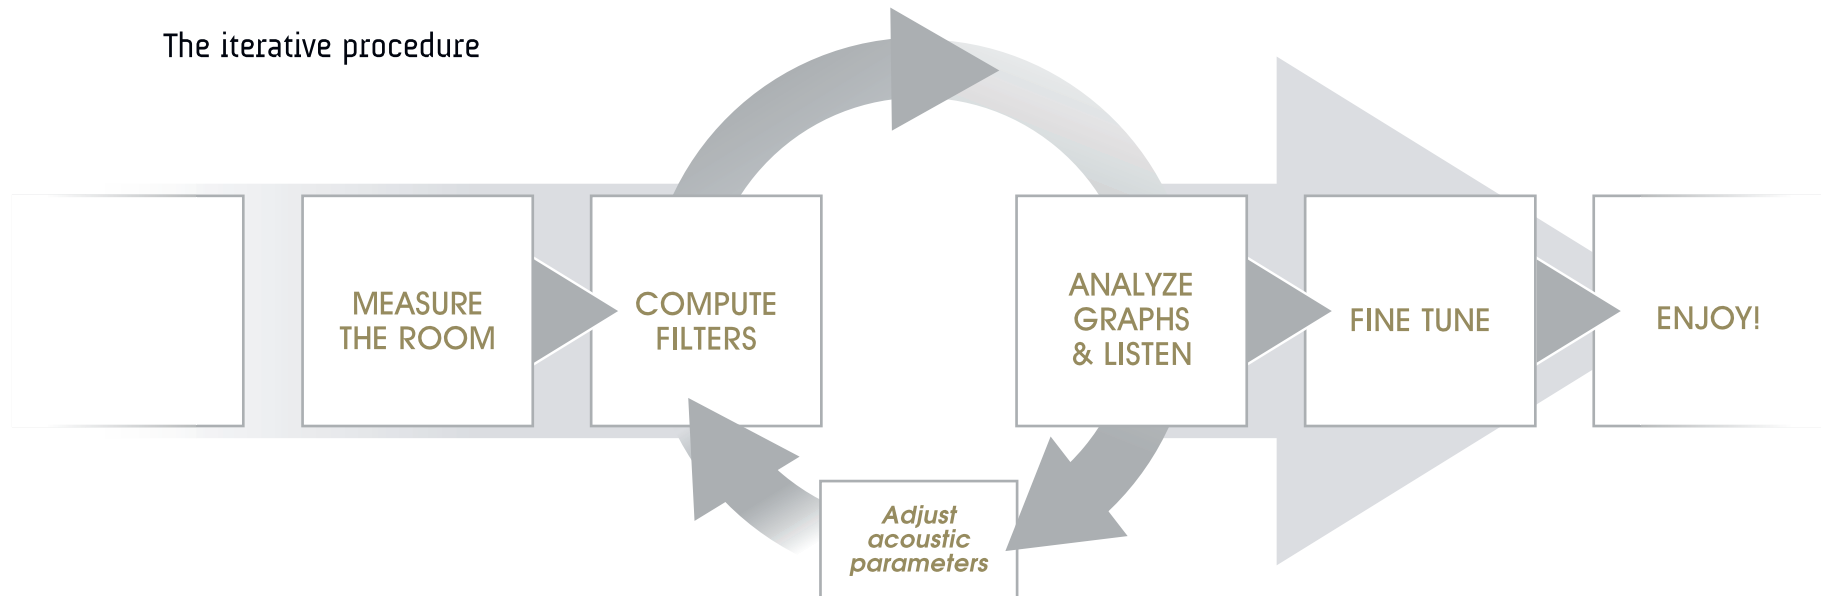

Settings screen



Advanced Settings screen

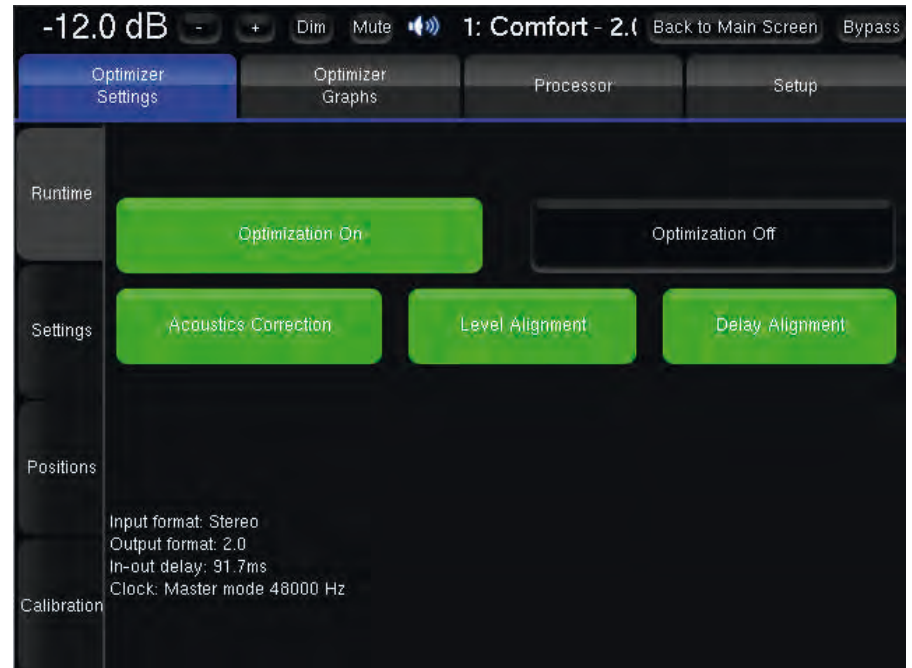

The *Advanced settings* screen can be accessed from the *Settings* screen.

The first tab shows the *Runtime* screen where it is possible to globally activate/desactivate the Optimizer, or activate/desactivate some aspects of the correction:

- **Acoustics correction:** amplitude and phase response corrections
- **Level Alignment:** level alignment of all speakers
- **Delay Alignment:** time alignment of all speakers

The **Optimization Off** button allows you to disable all corrections to understand the effect of the Optimizer. The **Bypass** button located on the top-right corner of the interface also allows you to switch all corrections off and remains visible regardless of the selected menu.

These runtime modes are also available from the front-panel *Optimizer* menu. Please refer to chapter 4.3.

9.4

OPTIMIZER GRAPHS

Reading and interpreting the Optimizer Graphs require some acoustic knowledge and is therefore dedicated to advanced users or certified installers.

The Optimizer Graphs include a **display** (1) and a **config** (2) area.

The **display** area is organized in:

- Tabs & Subtabs
- Graphs
- Frames


The **config** area is split in two tabs:

- **Display:** includes filters to decide which available informations should be displayed as Graphs / Frames and allows to adjust different zoom options.
- **Settings:** select what information should be displayed as graphs/frame/tabs/subtabs.

The **Zoom options** allow to display specific frequency range, to adjust the amplitude and time scales. The available zoom options depend on the displayed graphs.

The default layout is as follows :

- Tab: measurement points
- Subtab: responses
- Graphs: speakers
- Frames Before/After/Filter way graphs are organized

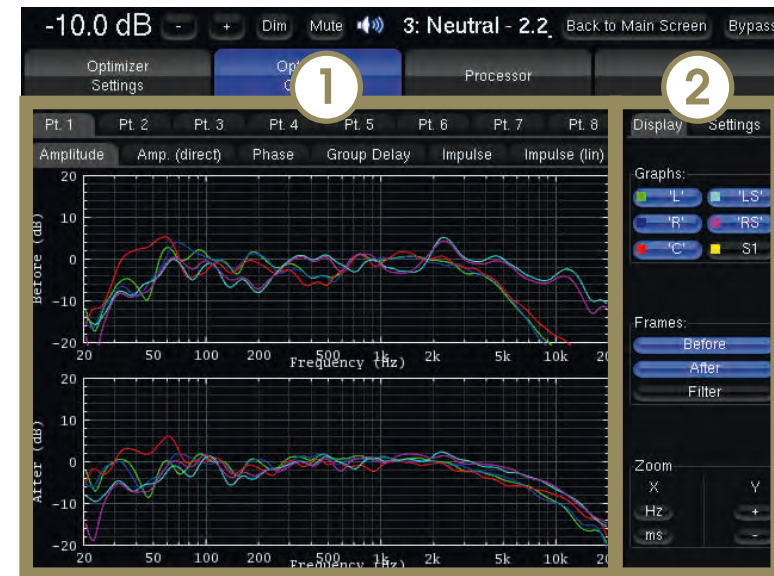

For every speaker and every measurement points, the following responses can be displayed:

Amplitude the amplitude response is the most commonly used and the most understandable graph available in the Optimizer. It represents the amplitude versus frequency response across the 20Hz-20kHz frequency range. It clearly shows dips and boosts which, with a trained ear, can easily be correlated with the listening experience and related to the global perceptual tonal balance of the system.

Amp. (Direct) this representation shows the amplitude response of the direct sound and early reflections. This representation better reveals acoustical problems (cross-over filters problems, room modes, reflections...) as well as the direct sound response.

Phase the phase response of a speaker shows the phase rotation versus frequency. Many phase rotations and relative responses offset between speakers indicate a lack of definition and an unstable stereo image.

Group Delay the group delay is also a time-related representation and displays relative time arrival of all frequencies at the listening point.

Impulse response it shows the main impulse of the speaker versus time and reveals the behaviour of the speaker depending on the room. The most sensible information is the amplitude of the main impulse versus the amplitude of the first reflections.

Computation & Graphs update

The parameters described in the following chapters require a computation to be applied.

As soon as a parameter is modified, the **Apply changes** button will highlight.


Pushing this button initiates a new calculation.

On modification of an Optimizer parameter and computation of the new compensation filters, the **Optimizer graphs response (After)** will be updated to show the new response and allow further correlation with the new listening experience.

After each parameter change, you can make new iterations and incrementally save new parameters as different presets to be able to recall each change with just a click.


NOTE

Despite the fact that the after correction responses are calculated instead of measured responses, re-measuring the Optimized system has always proved the accuracy of this calculation.

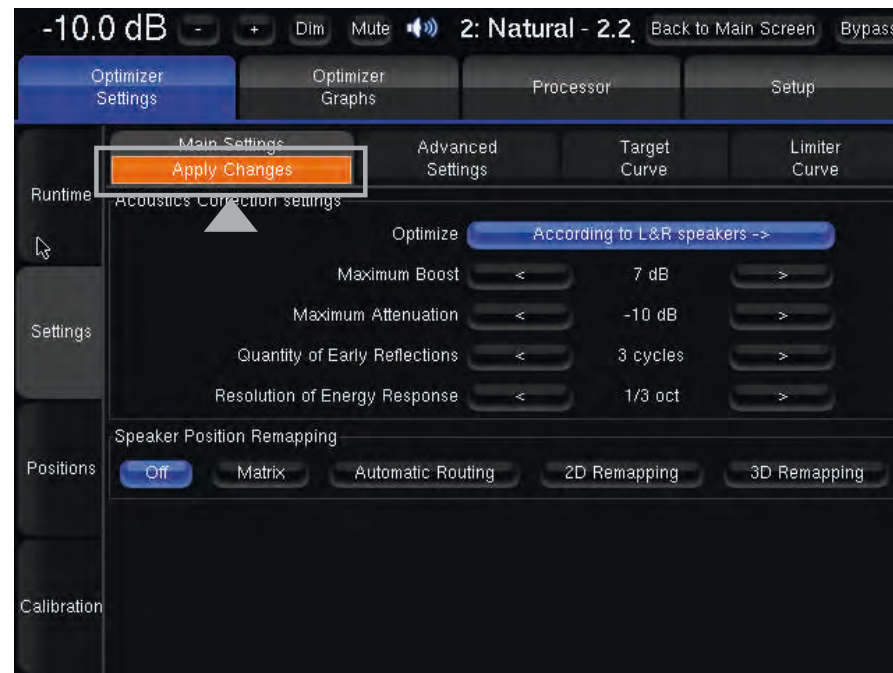

9.5 OPTIMIZER MODES

Optimize Modes

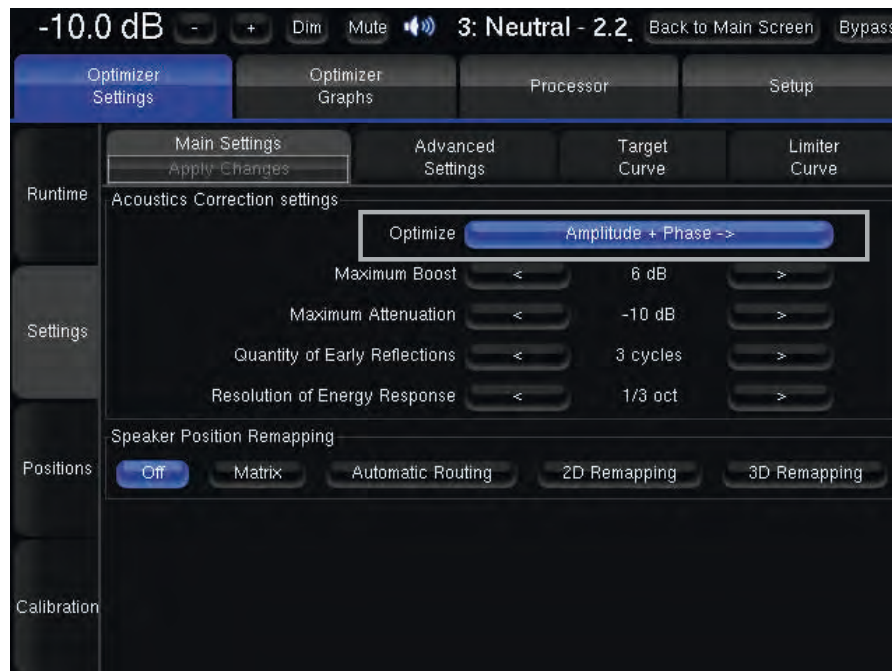

The **Optimize** setting allows to select the acoustic correction mode.

Amplitude + Phase



The **Amplitude + Phase** mode is used in every factory presets except the natural preset.

It is the default behaviour of the Optimizer and implies amplitude AND phase corrections to achieve better transients and to obtain the best sound staging.

Please refer to *chapter 8.7*

Amplitude only



The **Amplitude mode only** provides amplitude responses corrections only (thus not the phase corrections) and results in less spatial accuracy and stability.

Low Range only



The **Low range only** mode does not provide phase response correction and only compensates the amplitude response up to 150Hz (Default)..

This action limit of this mode can be defined in the **Advanced settings** page.

IIR Filters maximal frequency




IIR filters are dedicated to low range amplitude accidents.

The **IIR filters maximum frequency** can be modified and requires a computation.

The parameter **Number of IIR filters** should be increased with the **IIR filter maximal frequency** to maintain sufficient resolution and achieve efficient correction.

According to L&R speakers mode


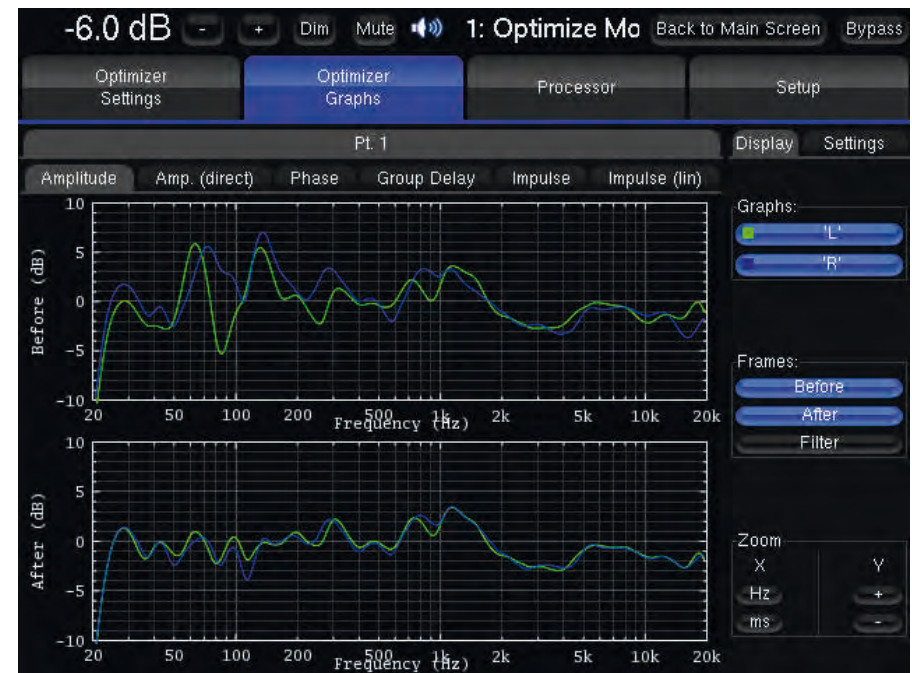


The **According to L&R speakers** mode takes the average response of the left and right loudspeakers as reference and automatically uses it as target curve.

This mode compensates the phase response of the speakers and the amplitude response below 150 Hz.

The range of action of the bass correction can be modified the same way as for the **Low Range only** mode.

According to L&R speakers

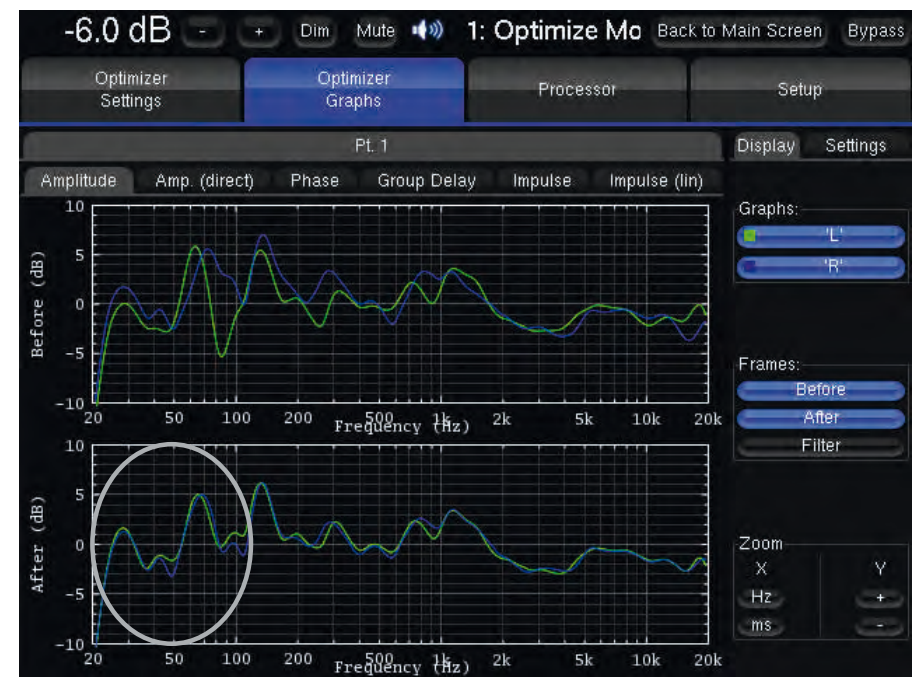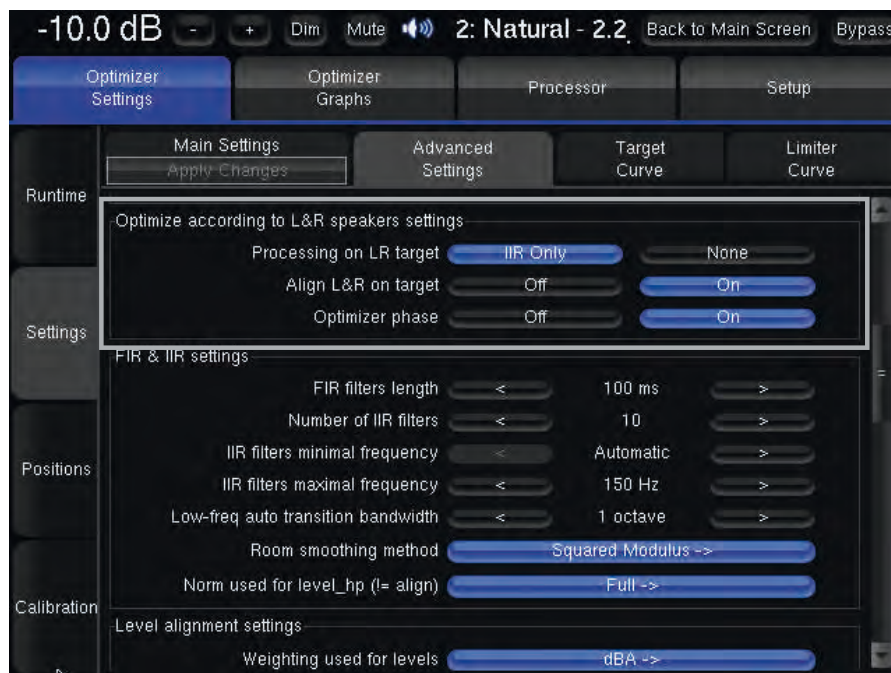

The *According to L&R speakers* has its own specific parameters :


Switching the *Processing on LR target* from *IIR Only* to *None* will disable the bass correction.

Disabling the *Align on L&R target* option will result in a flat target curve for mid/high frequencies.

Optimizer phase Off/On determines whether or not the phase correction is applied in *According to L&R* Optimizer mode.

9.6 OPTIMIZER SETTINGS

Maximum Boost & Attenuation

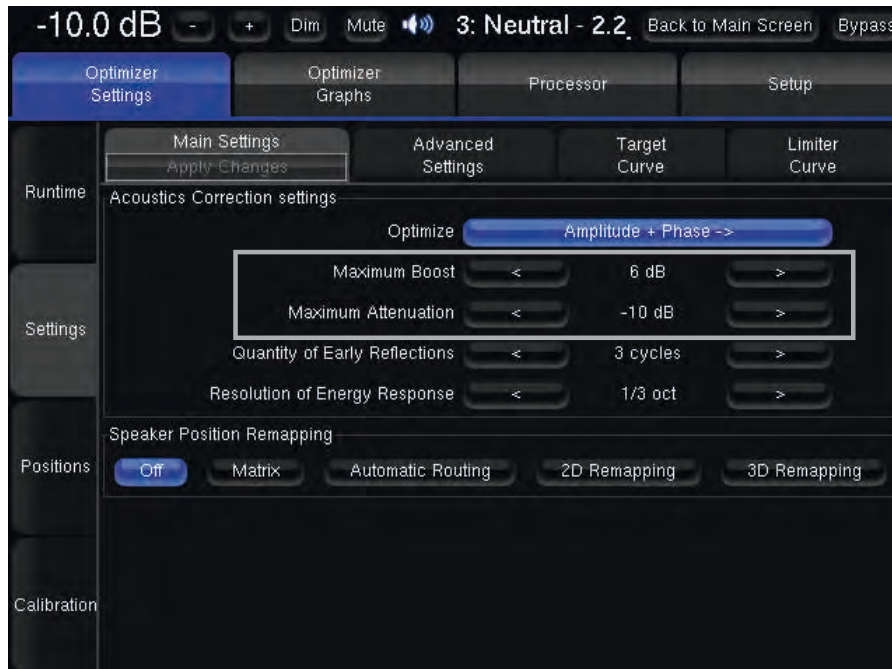

The **Maximum Boost** and **Maximum Attenuation** parameters are used to avoid over-correction, unless the amplification and the speakers have been sized consequently.

Displaying the **Filter response** should highlight frequency regions where the maximum boost/attenuation limiters are in action.



IMPORTANT

Excessive boost can cause distortion and damage speakers and should be avoided unless the audio diffusion system (amplification and speakers) has sufficient headroom.

These parameters affect the bandwidth.

Quantity of Early Reflections



The parameter **Quantity of Early Reflections** determines the amount of early reflections taken into account for acoustic compensation.

3 cycles is the default settings.

Resolution of the Energy response



Resolution of the Energy response allows to set the degree of accuracy with which the automatic correction algorithm will take the energy response of the room into account.

1/3 oct is the default settings.

The minimum resolution is 1/3° octave and the maximum resolution is 1/24° octave.

9.7 TARGET CURVE / LIMITER CURVE

Target Curve

The **Target Curve** is certainly the most powerful and the easiest fine-tuning tool within the advanced settings to adjust the automatic calibration and achieve a personalized tonal balance.

The correlation between graphical representation and listening experience can be made by comparing the before and after amplitude responses graphs while bypassing the correction using the **Bypass** button located in the upper part of the GUI.

The **Target Curve** tool is located in the **Optimizer Settings > Settings > Target Curve > Amplitude** page (see below).

The required curve can easily be edited:

- The green dots correspond to the required values for each frequency,
- The yellow line displays the expected results, taking into account the behaviour of the filters.


The target curve can be edited with mouse or gesture on touch screen. However, the most efficient way to edit the **Target Curve** is to use a keyboard, be it a physical or a virtual keyboard within a VNC client.

- Right and left keys allow to switch between editable points.



- Up and down keys shall be used to modify the amplitude of the target curve for the selected frequency with 0.1dB steps.

- PageUp and PageDown keys shall be used to modify the amplitude with 0.5dB steps.

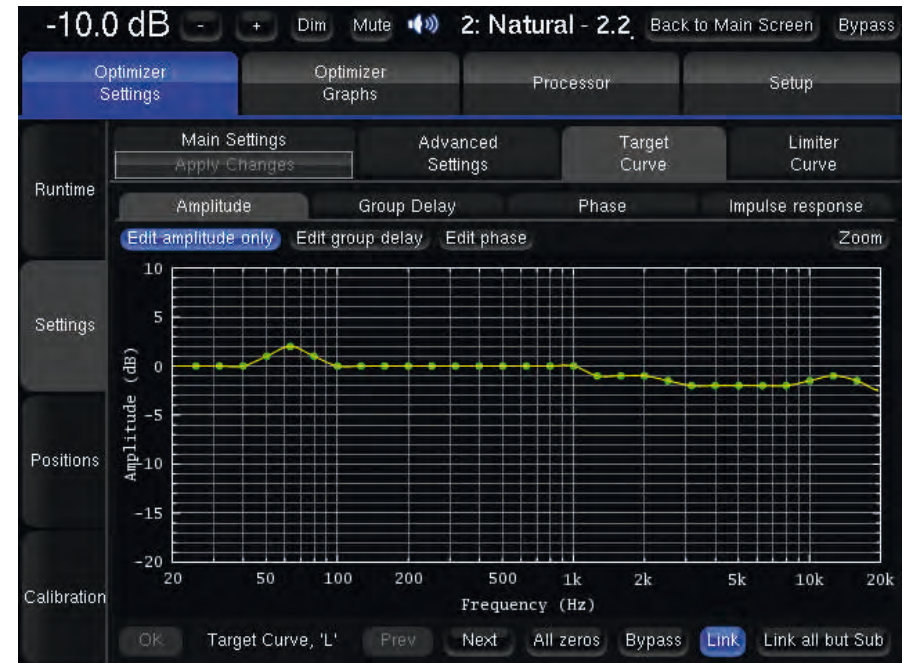

The **All zeros** button resets the curve.

The **Link** highlighted button indicates that the editing is performed for a group of speakers.

You can use the **Next** and **Previous** buttons and the **Link** button to exclude speakers from this editing group and apply speaker-specific correction.

The Target Curve can only be achieved if the required correction comply within the maximum boost and attenuation values.

Please respect the following procedure:


1. Pay attention to the amplitude scale while editing the target curve.
2. Preferably apply smooth corrections.
3. Press the **Apply Changes** button to recompute the filters.



Limiter Curve

The **Limiter Curve** is a frequency-dependant version of the Maximum boost/attenuation parameters.

The **default Limiter curve** limits boost and attenuation in the extreme frequencies.

The **Limiter curve** shows both the maximum boost and maximum attenuation allowed on a graphs with the amplitude in dB as ordinate and the frequency in Hertz as abscissa.

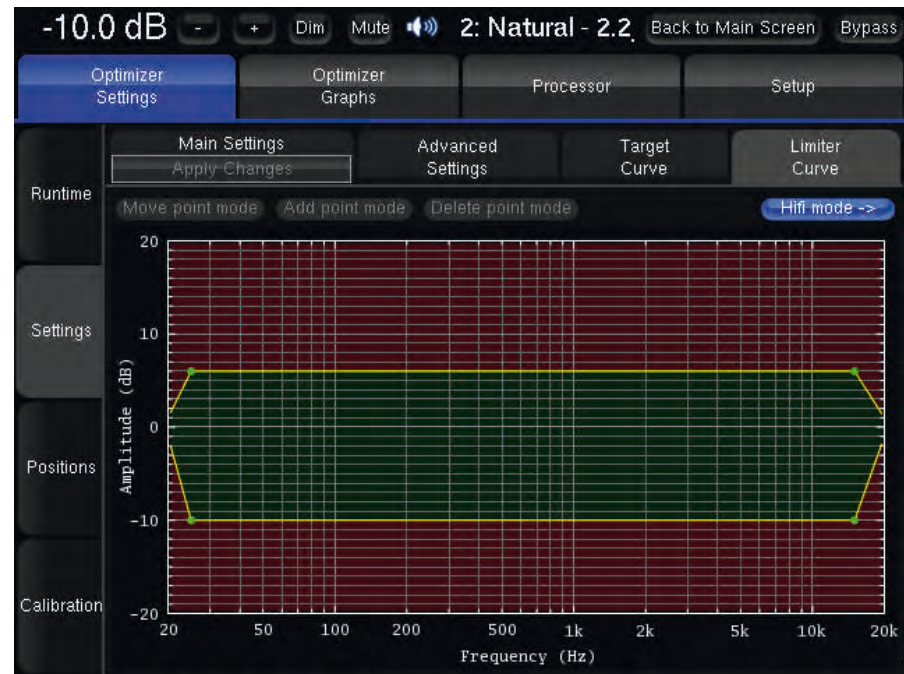

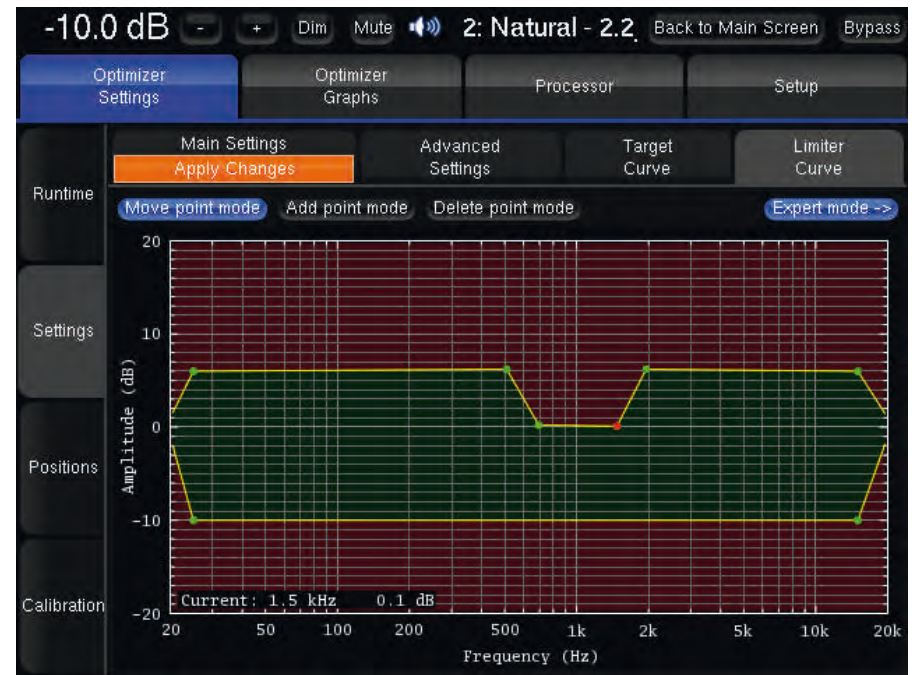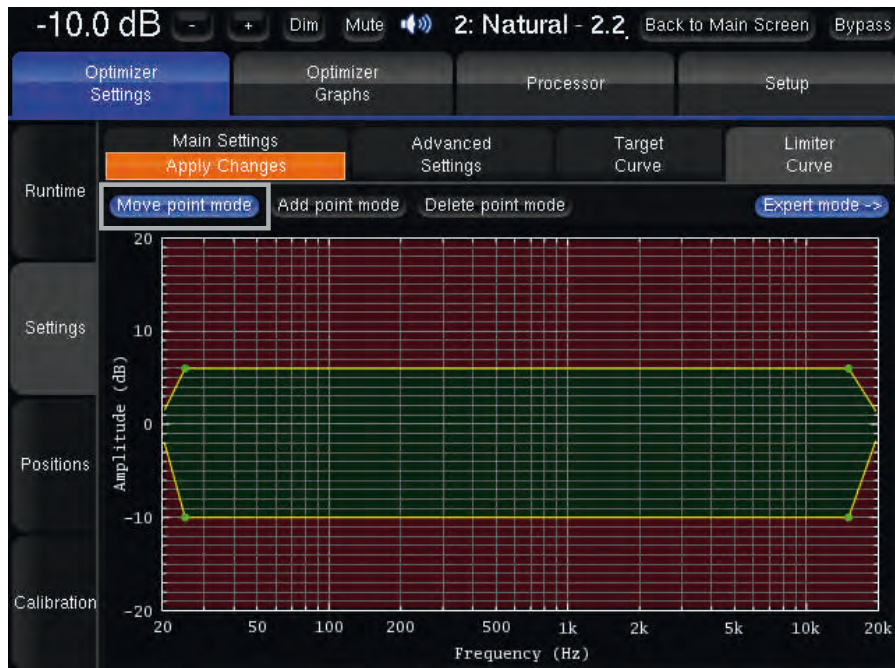

Pushing the HiFi mode switch the Limiter curve to *Expert mode* and enables three edit functions:

- **Move point** mode: click and shift an edit point in the vertical/horizontal direction to respectively adjust the amplitude/frequency allowed for the filter.
- **Add point** mode: click on the boost or attenuation curve at the required frequency to add an edit point.
- **Delete point** mode: click on an edit point to delete it.



In this example, the compensation filter will not be allowed to boost the amplitude response by more than 0.1 dB between approximately 700 and 1500 Hz.

It is recommended to apply smooth amplitude corrections with soft slopes.

The processing implies a latency, which depends on the following parameters :

- Sampling Rate
- Buffer size
- Advanced audio processing parameters

MAIN PRINCIPLE: The latency increases with the buffer size whereas it decreases with the sampling rate.

**IMPORTANT**

Depending on the requirements of the application, you can try to reduce the buffer size to lower the latency but please be aware that it might result in CPU overloads, sync loss and eventually loud digital clicks, especially when processing 192kHz audio on multiple channels.



10

MULTIPOINT CALIBRATION

10.1	PRINCIPLE	104
10.2	MEASUREMENT POSITIONS	104
10.3	MULTIPOINT ENGINE	105

10.1 PRINCIPLES

The purpose of multipoint calibration is not only to optimize a wider area but also to gather more information from measurements and increase reliability by taking differences occurring in the listening area into consideration. However, taking different measurements into account is irrelevant if the listening area considered is too much disparate acoustically. In other words, trying to generate compensation filters that works for a too large area would work but results in a lower improvement compared to the result provided at the listening position with a single measurement.

Choosing relevant positions for multipoint calibration is highly critical and will determine whether the target, which is achieving the best possible improvement for the widest possible area is reached or not.


10.2 MEASUREMENT POSITIONS

The following illustrations show a relevant and an irrelevant measurement areas for a single listening position. The idea is to perform measurements inside a volume that include head movements.


The instructions for the microphone placement concern the main measurement position, called Reference point.

Additional measurements can be made ahead, aside and above the reference point within the volume described above.

For multi seats measurement, it is recommended to choose measurement locations included in the center area and avoid the positions furthest away from the reference point.

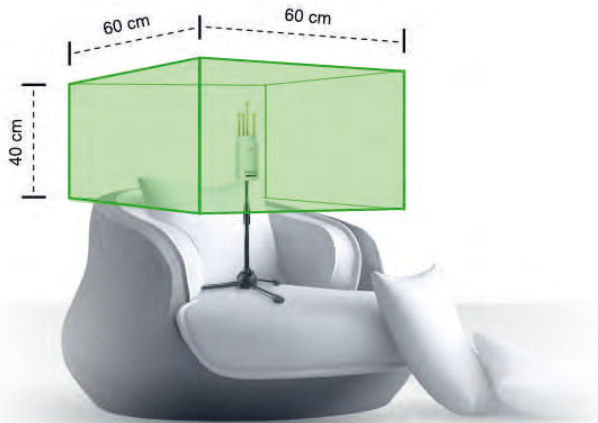

Good position multipoint measurement for single position

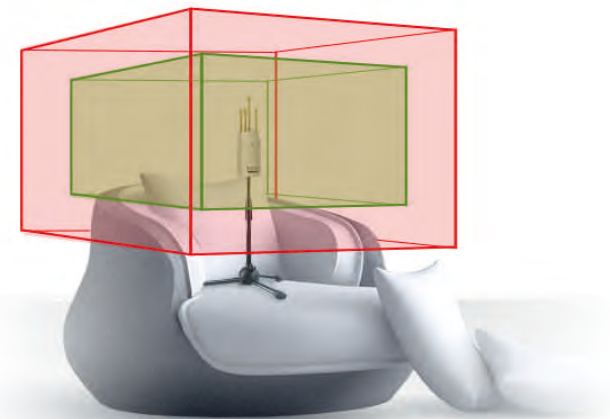

Wrong multipoint measurement for single position

10.3 MULTIPOINT ENGINE

A mutipoint calibration can be performed in the *Optimizer settings/Calibration* page, available in the *Advanced settings*.

Unless the preset loaded in the Amethyst contains multi-measurement, this page should only display one measurement.

Every measurement features a calibration status, a weight and a *Lock* option.

The *Calibration status* indicates whether a successful calibration has been performed for the measurement point or not.

The weight can be used to emphasis a measurement point or another, or even to exclude a measurement point from the compensation calculation (indicate zero in this line).

The *Lock* option makes the calibration impossible (the calibrate button becomes greyed and not clickable) for the measurement point.

The *Ref* lockbox is used to change the reference point.

Only the Reference point is used for :

- Cross-over drivers alignment
- Loudspeaker 3D localization
- Loudspeaker 2D/3D Remapping
- Loudspeaker relative delay/level alignment
- Master delay/level calculation



To perform multipoint measurement, please first refer to the *Calibration wizard* regarding microphone connection, placement, calibration level.

Unlike the *Calibration wizard*, please note that every step needs to be made manually.

As first step, push the *Mute* button and decrease the *Master level* to avoid feedback loop.

Then for each measurement point, follow the instructions below:

- Use the *Add* button to create a new measurement.
- Select the new measurement.
- Use the *Meas. name* field to rename the measurement.
- Use the *Calibrate* button to go through calibration of every speakers.

You can select and delete a measure using the *Delete* button.

However, it is rather recommended to use a null weight in order to exclude the measurement point from calculation.

To apply changes, whether it's to take different weighting into account or to use a different measurement as reference point, you need to recompute the compensation filters.

The Optimizer graphs will be updated accordingly.



In the example above, the Reference point has the same weight as the other points altogether.

In total, the measurement information of the reference point will be considered for 50% of the computation (5/10).





MULTICHANNEL SETUPS

11.1	SOURCES CONFIGURATION	108
11.2	SOURCES ROUTING	109
11.3	SPEAKERS CONFIGURATION	111
11.3	SPEAKERS ROUTING	112

11.1 SOURCES CONFIGURATION

NOTE

The Amethyst has mainly been designed to reproduce stereo content on any 4-speakers layouts, but the unit can also handle 4-channels sources, including 3.0, 3.1, LCRS and Quad.

The Wizard does not include templates for such configurations. It is therefore necessary to proceed manually to configure both the input format, and the speaker layout.

The source format can be chosen in the **Setup > Sources** page of the **Advanced settings**.

Select the required source format from the list using the **Next** and **Prev.** buttons.

The number of LFE can also be selected using **-1** and **+1** buttons.

The channel order displayed on the bottom line is also the calibration order.

Please keep in mind that the source format combined with the number of LFE cannot exceed 4 channels.



11.2 SOURCES ROUTING



The next step is to configure the Sources routing to make sure the channel affectation complies with the input connection.

Each row of the sources routing matrix represents a source channel and depends on the sources format configured during the previous step.



Each column of the sources routing matrix corresponds to a physical Input.

The caption above the routing matrix reminds the different types of inputs available on the Amethyst:

- **A** : Analog (both balanced and single-ended)
- **D** : AES
- **SP** : SPDIF (both coaxial and optical)

4-Channels sources

The physical Inputs available in the routing matrix depends on the selected source:

Selecting AES 1 activates AES 1 + AES 2 Inputs:



Selecting SPDIF 3 activates SPDIF 3 + SPDIF 4 Inputs:



Selecting OPTICAL 5 activates OPTICAL 5 + OPTICAL 6 Inputs:



Selecting ANA 1 Bal activates ANA 1 Bal + ANA 2 Bal Inputs:



Selecting ANA 3 SE activates ANA 3 SE + ANA 4 SE Inputs:



11.3 SPEAKERS CONFIGURATION

The Speaker layout can be configured in the *Setup > Speakers* page of the *Advanced settings*.

The number of speakers and subwoofer can be defined using the respective *-1* and *+1* buttons and cannot exceed 4 in total.


If the speaker layout includes subwoofer(s), the subwoofer will be calibrated full-range.

The *Bass management* settings can be modified after the calibration.



11.4 SPEAKERS ROUTING

The Speakers routing matrix is similar to the sources routing matrix.

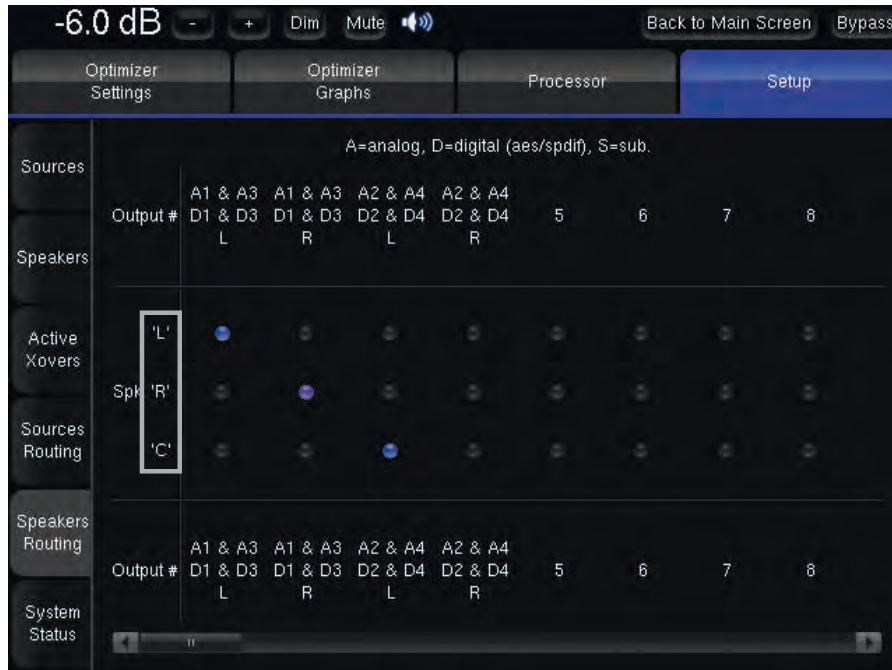

Each row of the speakers routing matrix represents a source channel and depends on both the sources format and speaker layout respectively configured during the previous steps.



Each column of the speakers routing matrix corresponds to a physical Output.

Outputs

Unlike for sources, all physical Outputs are used simultaneously.



The signals affected to **the first two columns** of the speakers routing matrix are simultaneously sent to the following Outputs :

- AES 1
- SPDIF 3
- Analog Balanced 1
- Analog SE 3

The signals affected to **the last two columns** of the speakers routing matrix are simultaneously sent to the following Outputs :

- AES 2
- SPDIF 4
- Analog Balanced 2
- Analog SE 4



Yours Musically.



Not just a gem.

TRINNOV
AUDIO
SOLUTIONS

5 rue Edmond Michelet - 93360 Neuilly-Plaisance - FRANCE ☎ +33 (0)1 84 23 40 34 ✉ support@trinnov.com

www.**TRINNOV**.com

